


# Instruction Manual

# Model 2015-59 Upconverter

January 2009 Rev. B

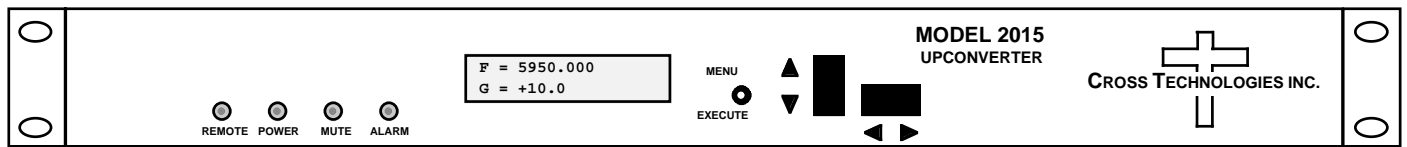

Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., but may be reproduced or duplicated without the prior permission of Cross Technologies, Inc. for purposes of operating the equipment.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.



6170 Shiloh Road  
Alpharetta, Georgia 30005

(770) 886-8005  
FAX (770) 886-7964  
Toll Free 888-900-5588

WEB [www.crosstechnologies.com](http://www.crosstechnologies.com)  
E-MAIL [info@crosstechnologies.com](mailto:info@crosstechnologies.com)

**INSTRUCTION MANUAL**  
**MODEL 2015-59 Upconverter**

<b><u>TABLE OF CONTENTS</u></b>	<b><u>PAGE</u></b>
<b>Warranty</b>	<b>2</b>
<b>1.0 General</b>	<b>3</b>
<b>1.1 Equipment Description</b>	<b>3</b>
<b>1.2 Technical Characteristics</b>	<b>4</b>
<b>1.3 Monitor &amp; Control Interface</b>	<b>5</b>
<b>1.4 Use Information</b>	<b>8</b>
<b>2.0 Installation</b>	<b>9</b>
<b>2.1 Mechanical</b>	<b>9</b>
<b>2.2 Rear Inputs &amp; Outputs</b>	<b>10</b>
<b>2.3 Front Panel Controls &amp; Indicators</b>	<b>10</b>
<b>2.4 Operation</b>	<b>11</b>
<b>2.5 Menu Settings</b>	<b>12</b>

**WARRANTY** - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are not other warranties, express or implied, except as stated herein.



6170 Shiloh Road  
Alpharetta, Georgia 30005

(770) 886-8005  
FAX (770) 886-7964  
Toll Free 888-900-5588


WEB [www.crosstechnologies.com](http://www.crosstechnologies.com)  
E-MAIL [info@crosstechnologies.com](mailto:info@crosstechnologies.com)

# MODEL 2015-59 Upconverter


## 1.0 General

### 1.1 Equipment Description

The Model 2015-59 Upconverter converts  $70 \pm 18$  MHz to 5.85 to 6.425 GHz in 1kHz, 10kHz, 100kHz, or 125kHz (user selectable) steps with low group delay and flat frequency response. Synthesized local oscillators (LO) provide low phase noise,  $\pm 0.1$  ppm high stability frequency selection. Push button switches select the RF frequency, gain, and other parameters. Front panel LEDs provide indication of PLL alarm (red), remote operation (yellow) or the TX carrier is muted (yellow). Variable attenuators for the IF input and RF output provide a gain range of 0 to +20 dB as adjusted by the front panel pushbutton switches. Remote operation allows selection of frequency and gain. Parameter selection and frequency and gain settings appear on the LCD display. Connectors are BNC (female) for IF and 10MHz reference input and output, and Type N (female) for the RF output (others optional). The unit is powered by a 100-240  $\pm 10\%$  VAC power supply, and housed in a 1.75" X 19" X 16" 1RU chassis.

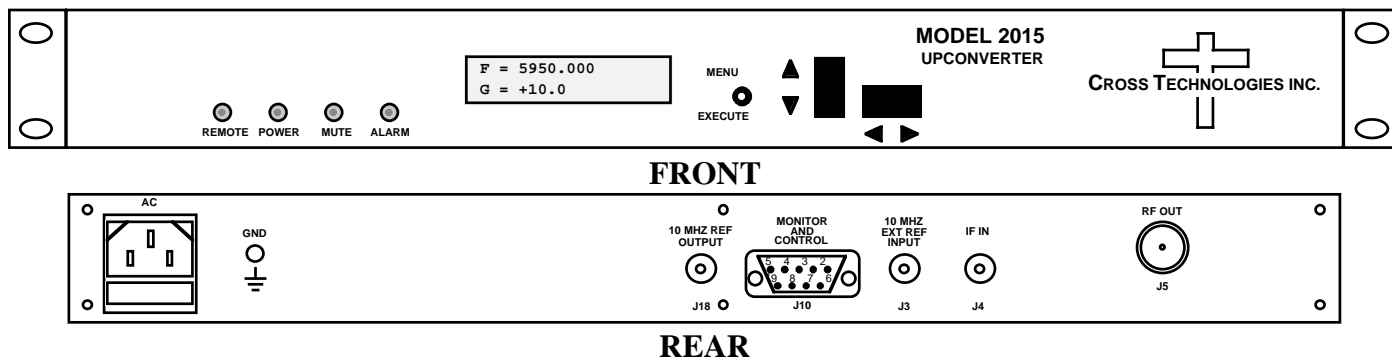

**FIGURE 1.1 Model 2015-59 Front and Rear Panels**

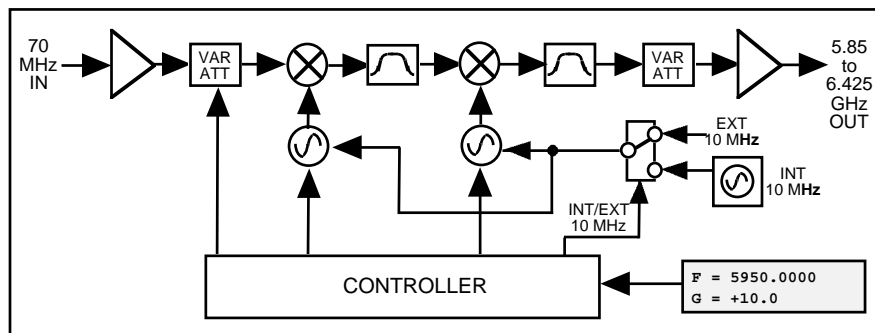

**FIGURE 1.2 Model 2015-59 Upconverter Block Diagram**

## 1.2 Technical Characteristics

**TABLE 1.1 2015-59 Upconverter Specifications\***

### Input Characteristics (IF)

Impedance	75Ω
Return Loss	18 dB
Frequency	70 ± 18 MHz
Level	-30 to -10 dBm

### Output Characteristics (RF)

Impedance	50Ω
Return Loss	14 dB
Frequency	5.85 to 6.425 GHz
Level	-20 to 0 dBm
1dB compression	+10 dBm

### Channel Characteristics

Gain range	0 to +20 dB (adjustable)
Spurious Response	<-50 dBC
Frequency Response	±1.5 dB, 5.85-6.425 GHz ; ± 0.5 dB, 36 MHz BW
Group Delay, max	0.01 ns/MHz <sup>2</sup> , parabolic, 0.03 ns/MHz, linear, 1 ns ripple
Frequency Sense	Non-inverting

### Synthesizer Characteristics

Frequency Accuracy	±0.01 ppm internal reference; external reference input
Frequency Step	1kHz, 10kHz, 100kHz, 125kHz (selectable)
10 MHz In/Out Level	3 dBm ± 3 dB

Phase Noise @ Freq	100 Hz	1kHz	10kHz	100kHz	1MHz
dBC/Hz	-65	-75	-85	-95	-105

### Controls, Indicators

Freq/Gain Selection	direct readout LCD; pushbutton switches or remote selection
Power	Green LED
Alarm	Red LED
Mute	Yellow LED
Remote	Yellow LED
Remote	RS232C, 9600 baud

### Other

RF Connector	Type N (female)
IF Connector	BNC (female)
10 MHz Connectors	BNC (female), 50Ω/75Ω
Alarm/Remote Conn.	DB9 - NO or NC contact closure on Alarm
Size	19 inch, 1RU standard chassis 1.75"high X 16.0" deep
Power	100-240 ±10% VAC, 47-63 Hz, 45 watts max

### Options


Q	RS485 Remote Interface
Z	Attenuator 0.1 dB steps
	<b>Connectors/Impedance</b>
	M - 50Ω N-type (RF), 50Ω BNC (IF)

\*+10°C to +40°C; Specifications subject to change without notice

### 1.3 Monitor and Control Interface

#### A) Remote Serial Interface

**Protocol:** RS-232C, 9600 baud rate, no parity, 8 data bits, 1 start bit, and 1 stop bit.  
(RS-232C, RS-422, or **RS-485 - option -Q**)

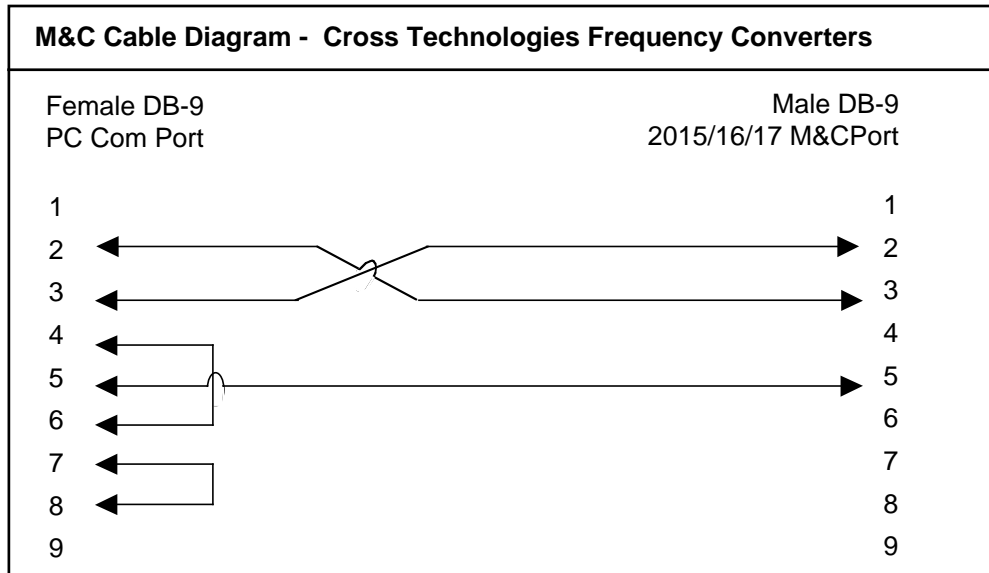

**Connector** - Rear panel, DB-9 female

#### Pinouts (RS-485/422/232C)

Pin	Description
1	Rx-
2	Rx+ (RS-232C)
3	Tx+ (RS-232C)
4	Tx-
5	Ground
6	Alarm Relay - Common
7	Alarm Relay - Normally Open
8	Not Used
9	Alarm Relay - Normally Closed

## B) Status Requests -

Table 1.1 lists the status requests for the 2015-02 and briefly describes them.

\* PLEASE NOTE: The two character {aa}(00-31) prefix, in the table below, should be used ONLY when RS-485, (OPTION-Q), is selected.

<b>Table 1.3 2015-59 Status Requests</b>		
<b>Command</b>	<b>Syntax</b>	<b>Description</b>
Command Status	{aaS1}* 	Returns {aaS1bbbbbbccddMEA} where: <ul style="list-style-type: none"> <li>• bbbbbbb = Tx frequency 4 characters - standard (7 characters - Option-X)</li> <li>• cc = Input Level</li> <li>• dd = Tx Gain</li> <li>• M = Tx RF Status (1 = Normal, 0 = Muted)</li> <li>• E = External Ref Status (1 = Ext Off, 0 = Ext On)</li> <li>• A = Alarm Status (0 = NO Alarm, 1 = Alarm)</li> </ul>

## C) Commands -

Table 1.2 lists the commands for the 2015-59 and briefly describes them. After a command is sent the 2015-59 sends a return ">" indicating the command has been received and executed.

**General Command Format** - The general command format is {aaCND...}, where:

- { = start byte
- aa = Address (**RS-485 only**)
- C = 1 character, either C (command) or S (status)
- N = 1 character command or status request
- D = 1 character or more of data (depends on command)
- } = stop byte

\* PLEASE NOTE: The two character {aa}(00-31) prefix, in the table below, should be used ONLY when RS-485, (OPTION-Q), is selected.


Table 1.2 2015-59 Commands		
Command	Syntax	Description
Set Transmitter Frequency	{aaC1xxxxxxx}* 	where: • xxxxxxx = 7 characters • Range: 5850000 to 6425000 kHz, 1kHz steps min.
Set Input Level	{aaClxx}* 	where: • xx = 2 characters • Range: 10 to 30 (-10 dB to -30 dB, in 1 dB steps)
Set Transmit Gain	{aaC3xx}* 	where: • xx = 2 characters • Range: 00 to 20 (0 dB to 20 dB, in 1 dB steps)
Enable Tx	{aaCAx}* 	where x =: • 0 to disable Tx signal • 1 to enable Tx signal
Enable External 10MHz	{aaCEx}* 	where x =: • 0 to disable External 10MHz ref signal • 1 to enable External 10MHz ref signal
Enable Remote	#	Just # sign
Disable Remote	{aaCRO}* 	{CR and zero}

## 1.4 Use Information

- A. Elevated operating ambient temperature** - if installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack may be greater than room ambient temperature. Therefore, consideration should be given to Tmra.
- B. Reduced air flow** - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. Additional space between unit may be required.
- C. Mechanical loading** - Mounting of equipment in a rack should be such that a hazardous condition does not exist due to uneven weight distribution.
- D. Circuit Overloading** - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits could have on over current protection and supply wiring. Appropriate consideration of equipment name plate rating should be used, when addressing this concern.
- E. Reliable Earthing** - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connection to the Branch (use of power strips).
- F. Top Cover** - There are no servicable parts inside the product so, the Top Cover should not be removed. If the Top Cover is removed the ground strap and associated screw **MUST BE RE-INSTALLED** prior to Top Cover screw replacement. **FAILURE TO DO** this may cause **INGRESS** and/or **EGRESS** emission problems.


## 2.0 Installation

**2.1 Mechanical** - The 2015-59 consists of one RF/Controller PCB which is housed in a 1 RU (1 3/4 inch high) by 16 inch deep chassis. A switching,  $\pm 12$ , +24, +5 VDC power supply provides power for the assembly. The 2015-59 can be secured to a rack using the 4 holes on the front panel. Figure 2.1 shows how the 2015-59 is assembled.

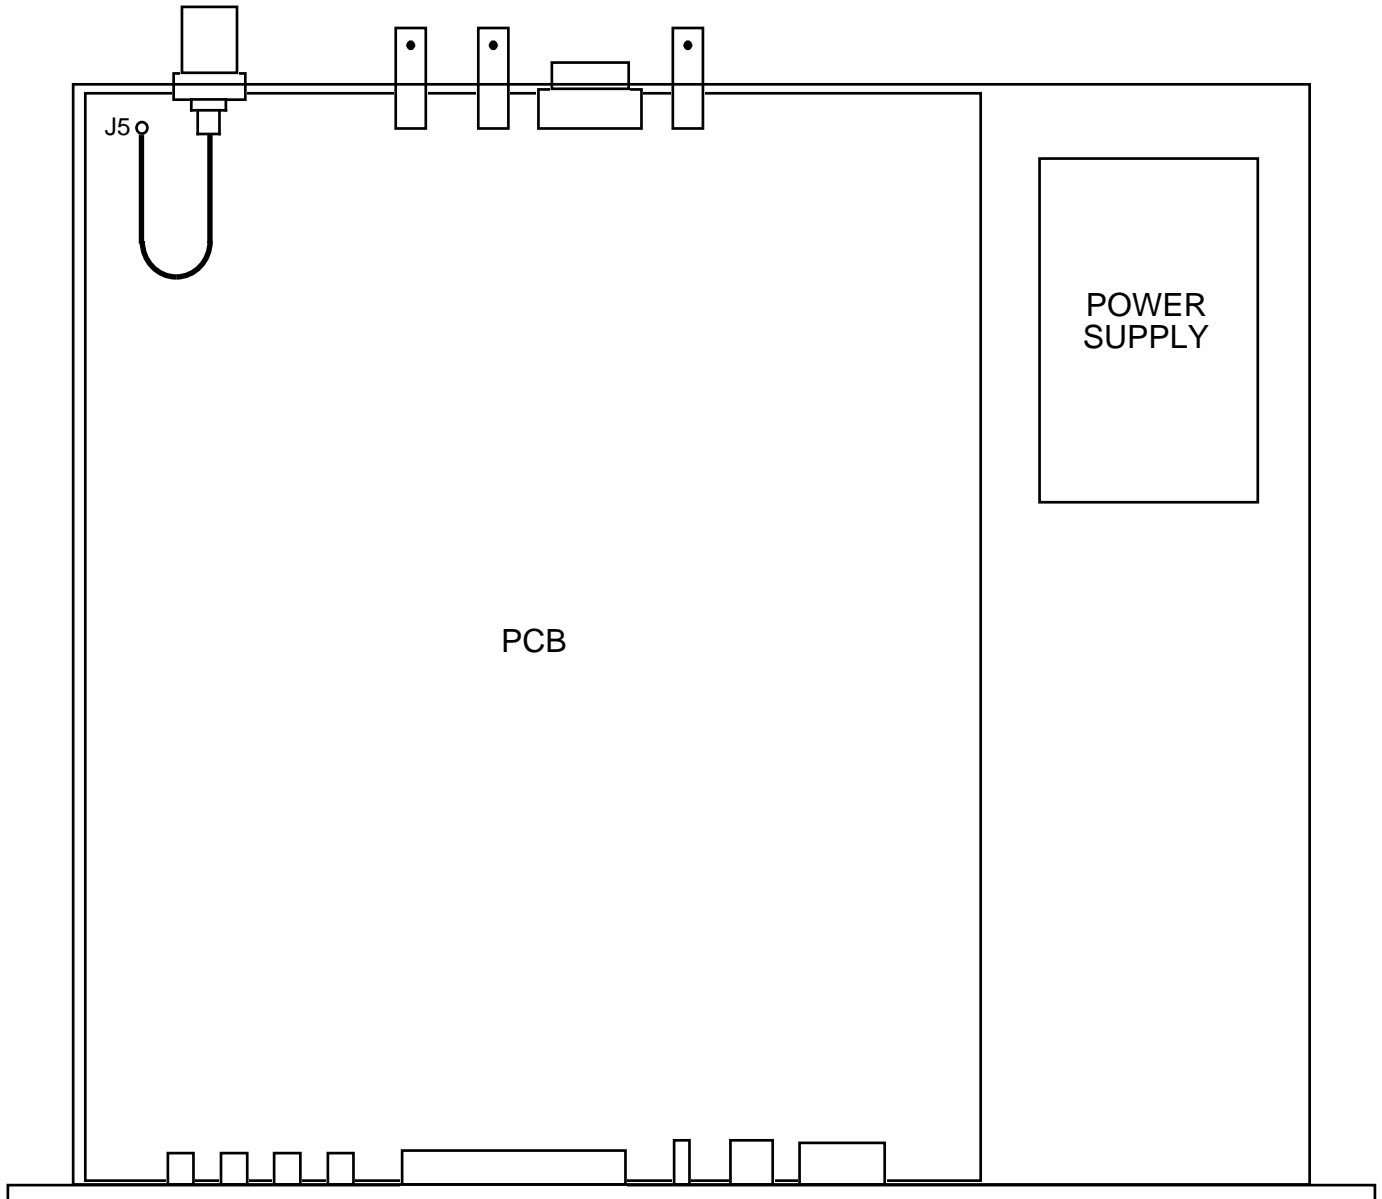

**FIGURE 2.1 2015-59 Mechanical Assembly**

## 2.2 Rear Panel Input / Output Signals - Figure 2.2 shows the input and output connectors on the rear panel.

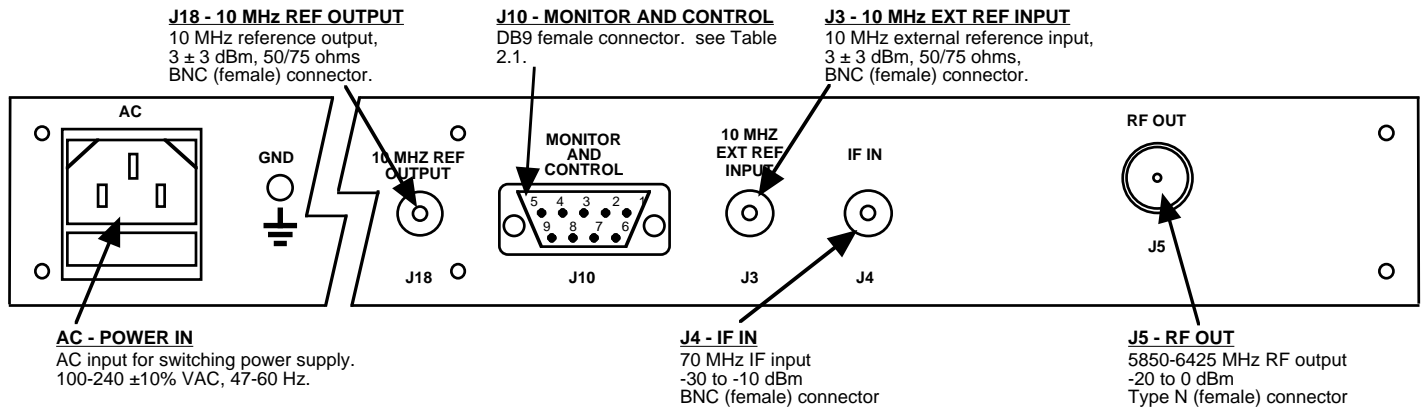


**FIGURE 2.2 2015-59 Rear Panel Inputs and Outputs**

Table 2.1 J10 Pinouts (RS-485/RS-422/RS-232C)*	
Pin	Description
1	Rx-
2	Rx+ (RS-232C)
3	Tx+ (RS-232C)
4	Tx-
5	Ground
6	Alarm Relay - Common
7	Alarm Relay - Normally Open
8	Not Used
9	Alarm Relay - Normally Closed

\***Interface:** DB-9 Female; **Protocol:** RS-485, RS-422, or RS-232C (selectable), 9600 baud rate, no parity, 8 data bits, 1 start bit, 1 stop bit

## 2.3 Front Panel Controls and Indicators -The following are the front panel controls and indicators.

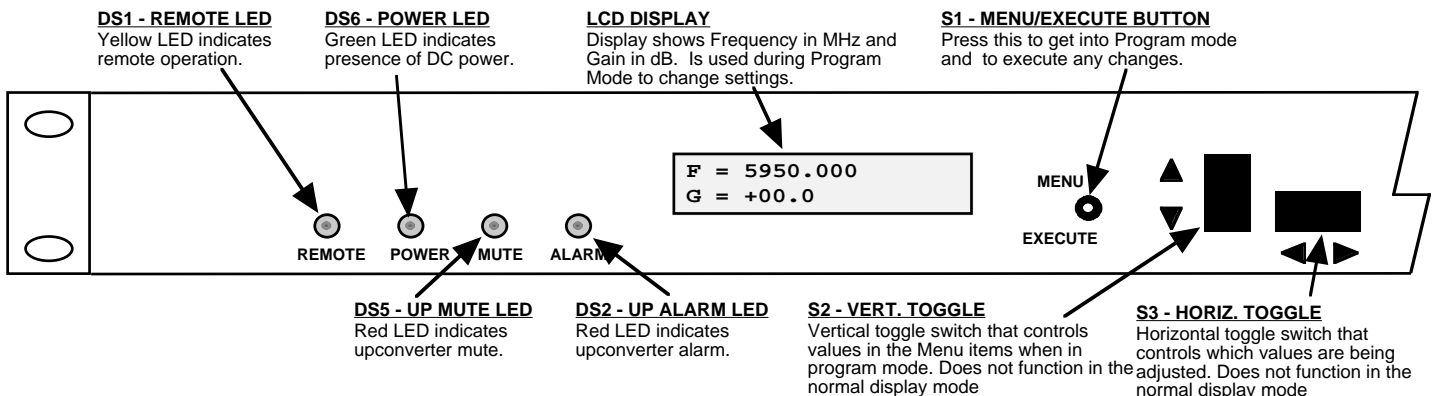


## **FIGURE 2.3 2015-59 Front Panel Controls and Indicators**

### **2.4 Installation / Operation**

#### **2.4.1 Installing and Operating the 2015-59 Upconverter**

1. Connect a -30 dBm to -10 dBm, 70MHz signal to IF IN, J4 (Figure 2.2)
2. Connect the RF OUT, J5, to the external equipment.
3. Connect 100-240  $\pm$ 10% VAC, 47 - 63 Hz to AC input on the back panel.
4. Set the desired output frequency (See Section 2.5 Menu Settings).
5. Set the input level (See Section 2.5 Menu Settings).
6. Set the gain for 0 to +20 dB. Make sure the output stays within -20 to 0 dBm with the gain selected and the input level provided. The firmware will prevent setting gain and input level outside this range. (See Section 2.5 Menu Settings).
7. Be sure DS6 (green, DC Power) is on and DS2 (red, Alarm) is off (Figure 2.3).
8. AC Fuse - The fuse is a 5 mm X 20 mm, 2 amp slow blow (Type T) and is inserted in the far slot in the drawer below the AC input as shown in Figure 2.4. There is a spare fuse in the near slot. If a fuse continues to open, the power supply is most likely defective.

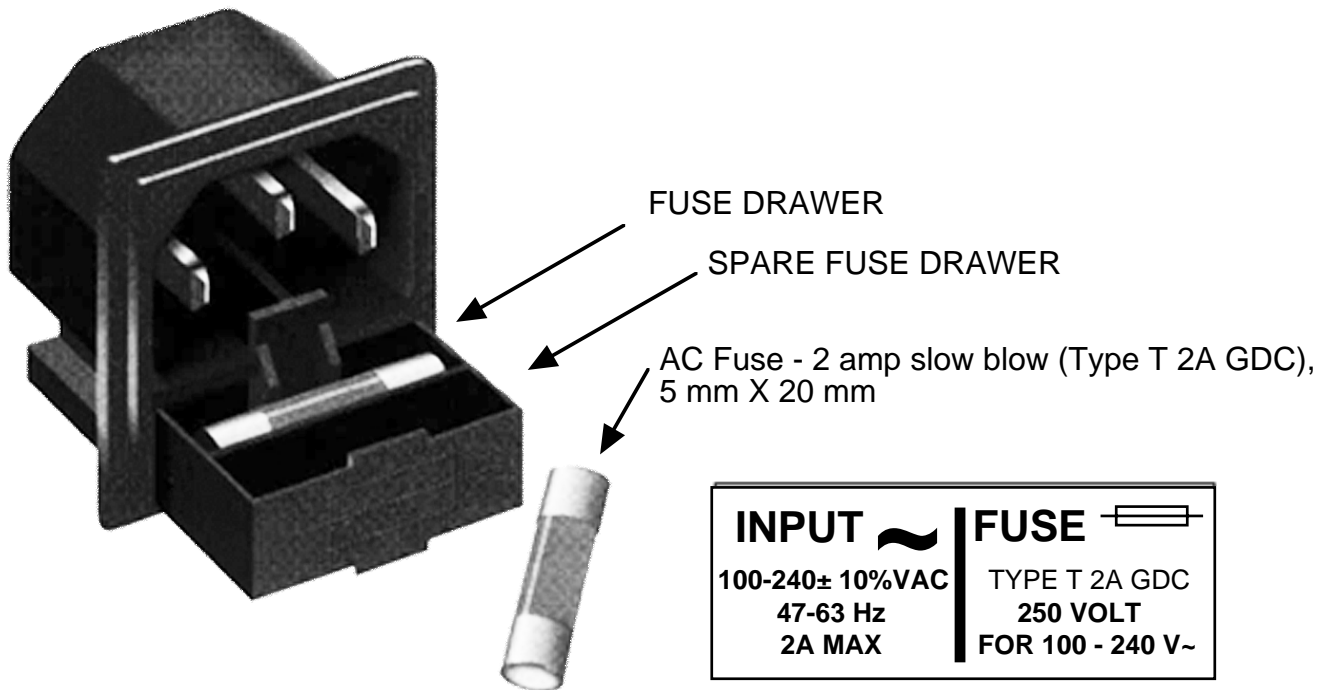

**FIGURE 2.4 Fuse Location and Spare Fuse**

## 2.5 Menu Settings

**2.5.1 Functions** - This section describes operation of the front panel controls. There are three operator switches, the LCD display and alarm indicator LEDs. All functions for the equipment are controlled by these components. The functions are (see Figure 2.5):

### Power Up

### Normal Display

<b>Menu 1</b>	Frequency in MHz
<b>Menu 2</b>	Input Level in dBm (-30 to -10)
<b>Menu 3</b>	Gain in dB (0 to +20)
<b>Menu 4</b>	Mute TX Signal
<b>Menu 5</b>	Set Unit to Remote Operation
<b>Menu 6</b>	Select Frequency Step Size (1kHz, 10kHz, 100kHz, or 125kHz)
<b>Menu 8</b>	Select External 10 MHz Reference
<b>Menu 9</b>	Select RS232, RS422, or RS485 Remote Operation ( <b>option Q</b> )
<b>Menu 10</b>	Select RS485 Remote Address for Unit ( <b>option Q</b> )
<b>Save Menu</b>	When go to end

Alarm indications appear on the LEDs (see figure 2.2).

All program changes must start with the operation of the Menu/Execute switch and must also end with the operation of the Menu/Execute switch verified by the “Save Settings?” Menu. If this sequence is not followed, none of the changes will take effect. If programming is initiated and no operator action takes place for approximately 12 seconds (before the final press of the Menu/Execute switch) the display will revert to its previous status and you will need to start over.

### 2.5.2. Power On Settings

**NOTE:** The last status of a unit is retained even when power is removed. When power is restored, the unit will return to its previous settings.


When power is first applied, the LCD display goes through three steps.

1. The LCD goes black to show all segments are functioning.
2. The software version will be displayed.



REV 1.00

 3. The present frequency, gain, and selected RF output of the upconverter is shown.



F = 5950.000  
G = +10.0

The unit is now operational and ready for any changes the operator may desire.

### 2.5.3 Control Switches

1. Menu/Execute - Any change to the programming of the unit must be initiated by pressing the Menu/Execute switch and completed by pressing the Menu/Execute switch.
2. Horizontal Switch - This switch is mounted so its movement is horizontal and moves the cursor left or right.
3. Vertical Switch - This switch is mounted so its movement is vertical and has two functions:
  - A) During frequency, gain changes, the vertical movement will raise or lower the number in the direction of the arrows.
  - B) For other functions such Mute on/off, the vertical switch will alternately turn the function on or off regardless of the direction operated.

## 2.5.4 Frequency Changes

At any time during the modification process, if you have made a mistake and do not wish to save the changes you have made, **do not press the Menu/Execute switch**; simply do nothing for approximately 12 seconds, and the system will return to the normal operating mode or scroll to “**R**” and push the menu/Execute switch and select “**NO**” in the “**SAVE SETTINGS?**” window.

To change the FREQUENCY:

1. Operate the Menu/Execute switch until you get to the menu item you want to change see Figure 2.5 for the sequence of menu options. The following display is for changing the upconverter frequency:

```
F = 5950.000      R
```

Pressing the Up/Down switch down will toggle the display to:

```
F = 5850.000      R
```

By using the horizontal rocker switch the cursor can be moved left or right .

```
F = 5850.000      R
```

**NOTE: CHANGES DO NOT TAKE PLACE ON FREQUENCY UNTIL YOU GO TO THE SAVE MENU AND INDICATE YOU WANT TO SAVE THE CHANGES. THE CARRIER IS MUTED WHEN FREQUENCY IS CHANGED.**

When the display indicates the value desired you can push the Menu/Execute switch to the next item:

```
INLVL = -20      R
```

OR you can scroll to “**R**”, push the Menu/Execute switch to get to:

```
SAVE SETTINGS?   Y N
```

Selecting **Y** will save the new settings. Selecting **N** will revert to the previous settings.

Pushing the Menu/Execute switch then takes you to the default display:

```
F = 5850.000  
G = +10.0
```

Figure 2.5 shows all the menu items and how to make changes.

## 2.5.5 Gain Changes

When you get to this menu note that the gain changes will be made as you make them but if you do not wish to save the changes you have made, scroll to “R” and push the menu/Execute switch and select “NO” in the “SAVE SETTINGS?” window or **do not press the Menu/Execute switch**; simply do nothing for approximately 12 seconds, and the system will return to the normal operating mode.

To change the GAIN, first push the Menu/Execute switch to get to the gain setting:

Operate the Menu/Execute switch until you get to the menu item you want to change (see Figure 2.5 for the sequence of menu options). The following display is for changing the upconverter input level. This is an important setting to optimize spurious and should be made as accurately as possible:

```
INLVL = -20           R
```

**NOTE: CHANGES TAKE PLACE ON LEVEL AND GAIN IMMEDIATELY BUT DO NOT GET SAVED UNTIL YOU GO TO THE SAVE MENU AND INDICATE YOU WANT TO SAVE THE CHANGES.**

Press the Up/Down switch to change the level in 1 dB steps and then push the Menu/Execute switch to get to the Gain setting:

```
G = +10.0           R
```

Press the Up/Down switch to change the gain in 0.1, 1 or 10 dB steps:

```
G = +20.0           R
```

By using the horizontal rocker switch the cursor can be moved left or right. Pressing the Up/Down switch down will toggle the display digit selected until you have the desired gain.

**NOTE: THE GAIN WILL BE CHANGED AS YOU ADJUST THE NUMBERS. HOWEVER, THE VALUE WILL NOT BE STORED UNTIL YOU INDICATE YES IN THE SAVE SETTINGS WINDOW. DO NOT SET A GAIN THAT WOULD EXCEED 0 dBm OR HAVE LESS THAN -20 dBm OUTPUT LEVEL. THE FIRMWARE PREVENTS YOU FROM THIS.**

When the display indicates the value desired you can push the Menu/Execute switch to the next item OR you can scroll to “R”, push the Menu/Execute switch to get to:

```
SAVE SETTINGS?   Y N
```

Selecting **Y** will save the new settings. Selecting **N** will revert to the previous settings.


Pushing the Menu/Execute switch then takes you to:

```
F = 5850.000
G = +20.0
```

Figure 2.5 gives the menu items and how to make changes

### 2.5.5 Alarm Indications

An alarm condition will occur if the local oscillator phase lock loop (PLL) comes out of lock. The Mute LED will light if you select to mute the Tx Signal and the Remote LED will light when you select the Remote mode.

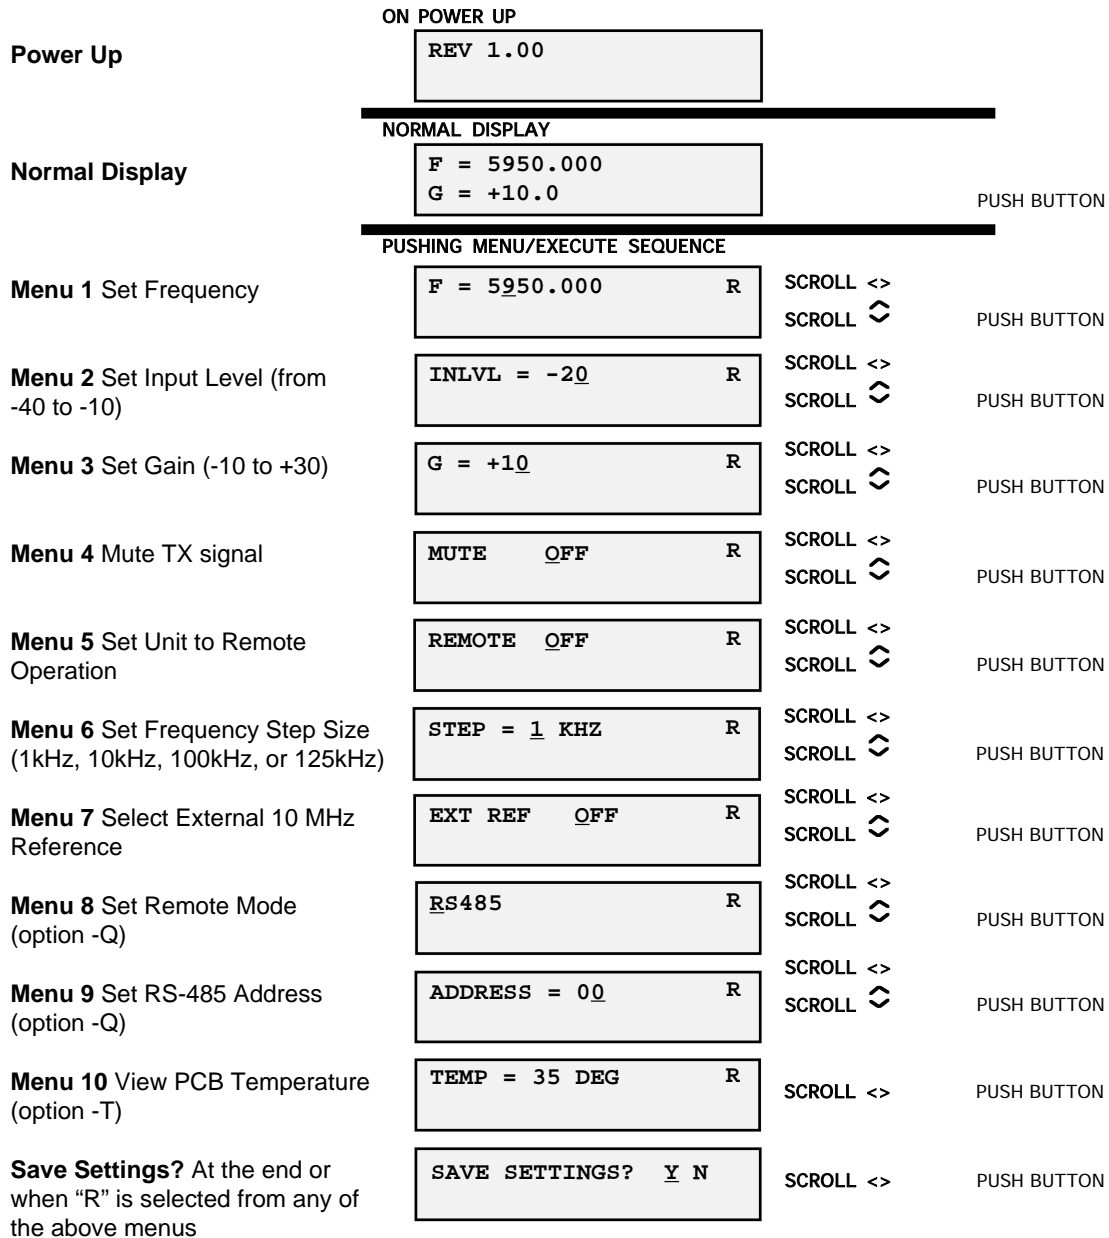

**FIGURE 2.5 Menu Display and Sequence**



6170 Shiloh Road  
Alpharetta, Georgia 30005

(770) 886-8005  
FAX (770) 886-7964  
Toll Free 888-900-5588

WEB [www.crosstechnologies.com](http://www.crosstechnologies.com)  
E-MAIL [info@crosstechnologies.com](mailto:info@crosstechnologies.com)