


Instruction Manual

Model 2005-22P Downconverter

October 2013, Rev. D

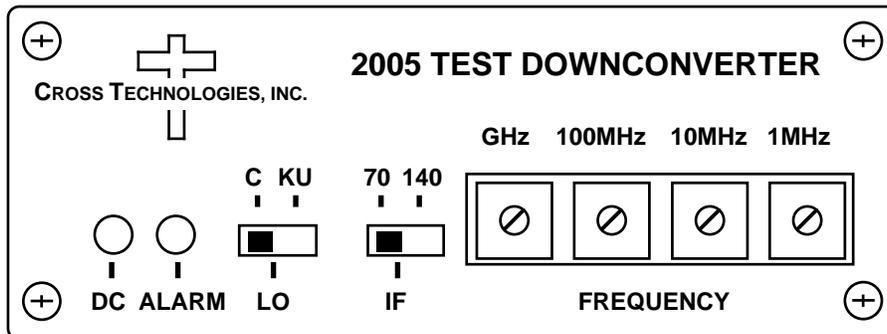

Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., but may be reproduced or duplicated without the prior permission of Cross Technologies, Inc. for purposes of operating the equipment. Printed in USA.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB: www.crosstechnologies.com
E-MAIL: info@crosstechnologies.com

INSTRUCTION MANUAL

MODEL 2005-22P Downconverter

<u>TABLE OF CONTENTS</u>	<u>PAGE</u>
Warranty	2
1.0 General	3
1.1 Equipment Description	3
1.2 Technical Characteristics	4
2.0 Installation	5
2.1 Mechanical	5
2.2 Front Panel Controls/Indicators	5
2.3 Rear Panel Input/Output Signals	5
2.4 Accessing the PC Card	6
2.5 Installation/Operation	6
3.0 Environmental Use Information	8

WARRANTY - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are no other warranties, express or implied, except as stated herein.



6170 Shiloh Road
Alpharetta, Georgia 30005
(770) 886-8005 FAX (770) 886-7964
Toll Free 888-900-5588
WEB: www.crosstechnologies.com
E-MAIL: info@crosstechnologies.com

MODEL 2005-22P Downconverter

1.0 General

1.1 Equipment Description

The 2005-22P Downconverter, for loop-back applications, converts a 950 to 2050 MHz signal to 70 MHz in 1 MHz steps with a high side 1020 to 2120 MHz LO (C, inverted spectrum) and 1070 to 2050 MHz to 70 MHz with low side 1020 to 1980 MHz LO (Ku, non-inverted spectrum). Over a limited frequency range, the 2005-22 also operates with a 140 MHz output. (See Section 2.5.2, PG 7)

Featuring low phase noise, these units are used to downconvert “clean” (having only this frequency) 950 to 2050 MHz signals to 70 or 140 MHz for test purposes. The input frequency is selected with four BCD switches which control the synthesized LO. The 950 to 2050 MHz input is mixed with a synthesized local oscillator (LO) signal to the 70 or 140 MHz IF. Front panel LEDs light when DC power is applied (green) and when a PLL alarm occurs (red). The mixer output is applied to the output amplifier providing a nominal gain of **0 dB** (high gain) or **-20 dB** (low gain). **Power is provided by the LNB voltage from the receiver under test and connectors** are 75 ohm BNC female for the 70 MHz output and type F (female) for the RF input. DC power for the 2005-22 can be provided by an external wall mount power supply (**option -P4**) or by the **stand alone Cross 2000-01 Power Supply (option -C)**. The 2005-22 can also be mounted on a 1RU X 19" rack mount panel (**option -R**).

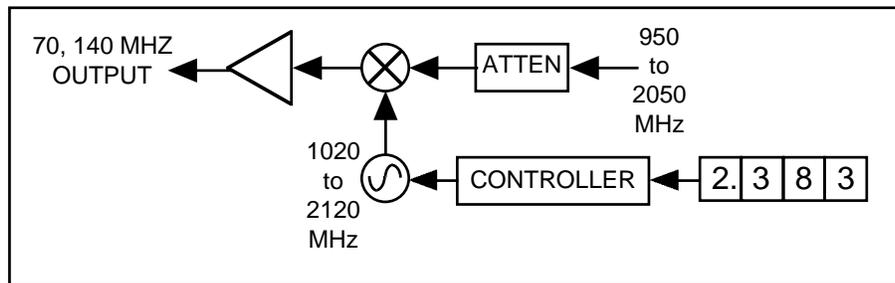


FIGURE 1.1 Block Diagram

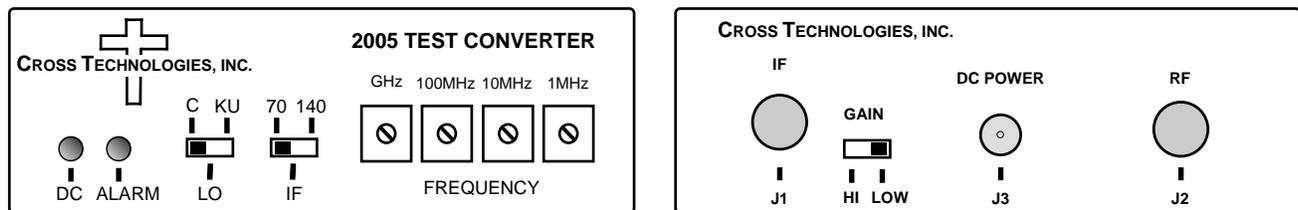


FIGURE 1.2 Front and Rear Panel

1.2 Technical Characteristics

TABLE 1.0 2005-22P Downconverter Specifications**					
Input Characteristics					
Impedance	75Ω				
Return Loss	12 dB				
Frequency	950 to 2050 MHz				
Level	-10 to -30 dBm				
1 dB Compression	-5 dBm				
Output Characteristics					
Impedance	75Ω				
Return Loss	15 dB				
Frequency Range	70 or 140 MHz cwnrwe, ± 20 MHz				
Channel Characteristics					
Gain	-20 dB ±3 dB (LOW GAIN), 0 dB ±3 dB (HI GAIN)				
Spurious Response	< -40 dBC max. < -45 dBC typical; Outpt Not Filtered				
Frequency Response	±3 dB, 950-2050 MHz; ± 0.5 dB, any 10 MHz increment				
Synthesizer Characteristics					
Frequency Accuracy	±25 kHz maximum				
Frequency Step	1.0 MHz minimum				
Phase Noise @ F (Hz) >	100 MHz	1kHz	10kHz	100kHz	1MHz
dBC/Hz	-70	-70	-80	-90	-100
Controls/Indicators					
Frequency Selection	BCD Switches				
DC Power	Green LED				
PLL Alarm	Red LED				
Other					
RF, IF Connectors	Type F (female), BNC (female)				
Size, Bench Top	4.7" Wide X 1.75" High X 6.5" Deep				
Size, Rack Mount	19 inch Standard Chassis, 1.75" High X 7.0" Deep (Option -R)				
Power Supply Options:					
Power (Option -P4)	100-240 ± 10% VAC, 47-63 Hz wall mount power supply, +15VDC unregulated. 600 ma.				
Power (Option -C)	No power supply - Requires external 2000-01 Power Supply				
*+10 to +40 degrees C; Specifications subject to change without notice			© 2013 Cross Technologies, Inc.		

2.0 Installation

2.1 Mechanical

The 2005 is packaged in an aluminum extrusion. The **-R option** is mounted on a 1 3/4" X 19" panel that can be mounted to a rack using the 4 holes at the ends. The unit derives +DC from the RF out center conductor (+15 to +20 VDC) or the wall power supply (+15V unregulated, **option -C, -P4**). See Figure 2.3.

2.1.1 Cleaning Instructions

Wipe the exterior with a dry, soft cloth. Use no detergent or cleaning chemicals.

2.2 Front Panel Controls/Indicators - Figure 2.1 shows front panel controls and indicators for the 2005-22P.

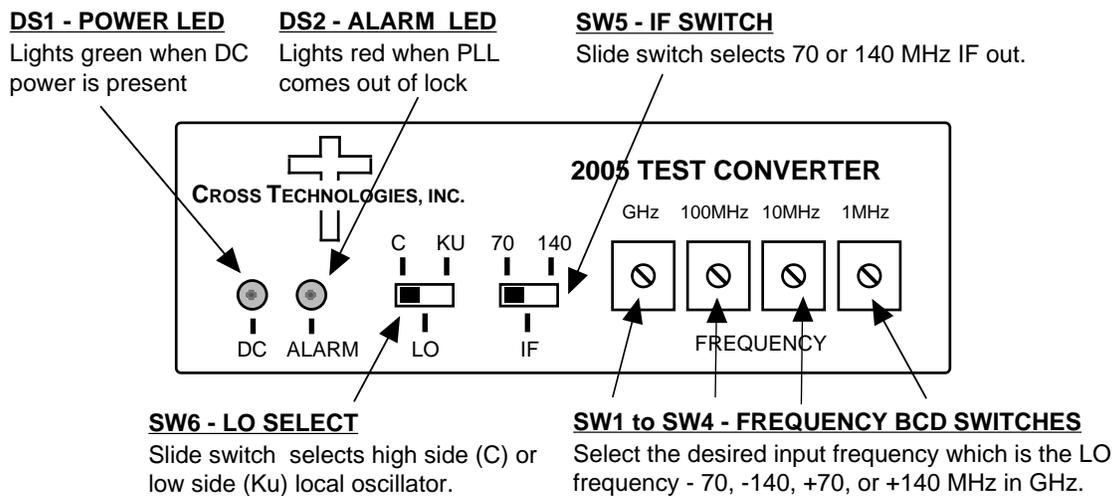


FIGURE 2.1 2005-22P Front Panel Controls and Indicators

2.3 Rear Panel Input/Output Signals - Figure 2.2 shows the input and output signals to the 2005-22.

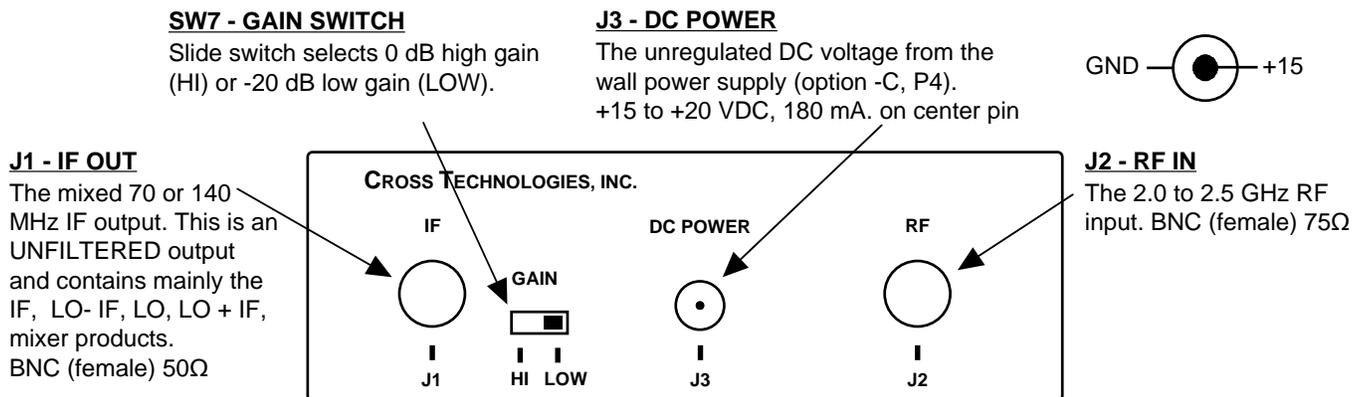


FIGURE 2.2 2005-22P Rear Panel Inputs and Outputs

2.4 Accessing the PC Card

There are NO USER JUMPERS or other on-card controls. ALTHOUGH IT IS NOT RECOMMENDED AND MAY VOID THE WARRANTY the following shows how to remove the printed circuit board (PCB) from the extrusion:

1. ALWAYS REMOVE POWER when installing or removing the PCB from the extrusion
2. Remove four (4) rear panel screws (see Figure 2.3).
3. GENTLY pull the rear panel and PCB assembly completely out of the extrusion.
4. To install the PCB, GENTLY push the rear panel and PCB assembly completely into the extrusion. Make sure the shield goes in the lower channel and the PCB in the next channel above that in the extrusion and that the front panel controls go through the front panel holes.
5. Install four (4) rear panel screws.

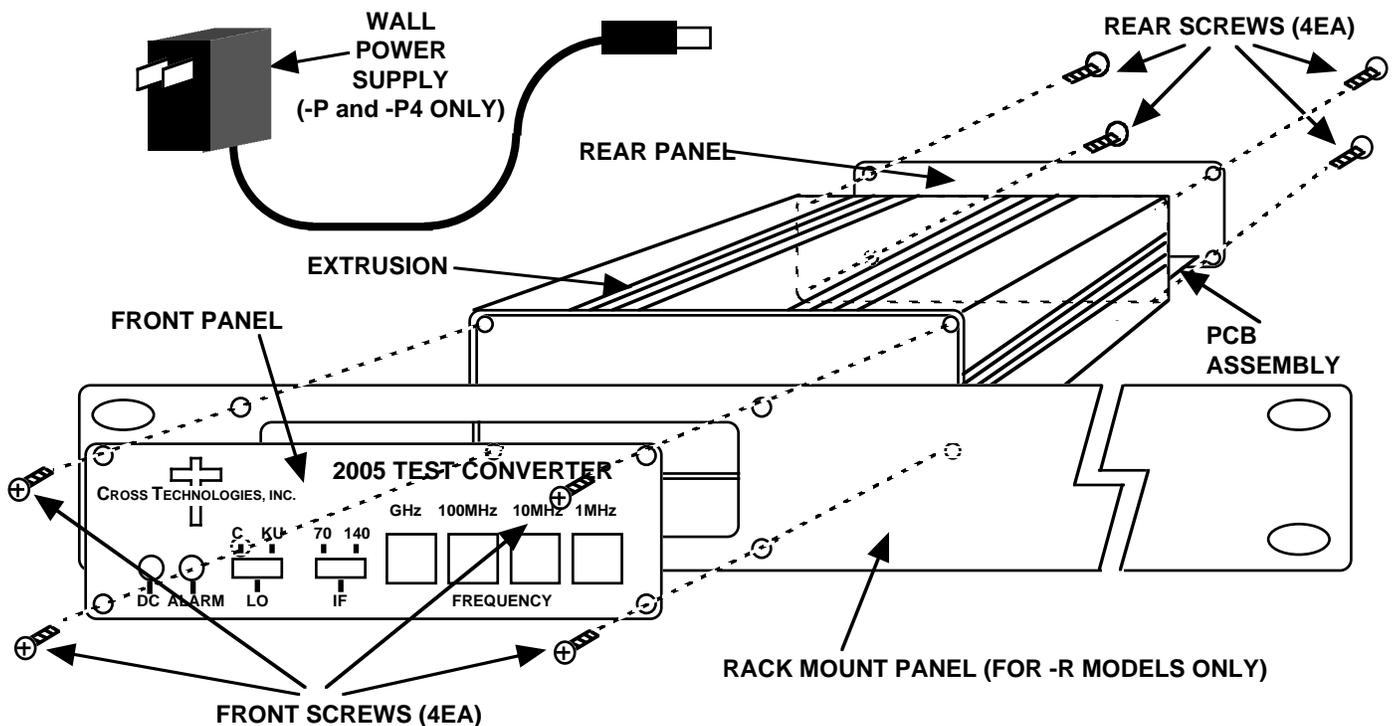


FIGURE 2.3 2005 Assembly Drawing

2.5 Installation / Operation

2.5.1 Installing and Operating the 2005-22P

1. If using the receiver LNB voltage to power the 2005-22P, be sure +15 to +20 VDC is on the RF center conductor. If using the wall power supply (**options -C or -P4**), connect the power supply to the DC POWER connector and either 120 VAC (-C) or 100-240 $\pm 10\%$ VAC (-P4) (Figure 2.2).
2. Select either C or KU band (SW6) and either 70 or 140 MHz IF (SW5) using the front panel switches (Figure 2.1).
3. Select either HI or LOW GAIN using the switch (SW7) on the rear panel (Figure 2.2).
4. Connect a -10 dBm max RF signal to RF In, J2 (Figure 2.2).
5. Connect the IF Out, J1, to the modulator under test (Figure 2.2).
6. Set BCD switches, SW1 to SW4, to the desired frequency (Figure 2.1).
7. Be sure DS1 (green, DC Power) is on and DS2 (red, Alarm) is off (Figure 2.1).

2.5.2 LO and IF for the 2005-22P

The 2005-22P operates over its full 950 to 2050 MHz range with high side LO and 70 MHz input. Normally, LNB's use high side LO for C-band and low side LO for Ku-band. Also, note that there will be a spectrum inversion of the input IF modulation with the high side LO. Although the 2005-22P operates over its full 950 to 2050 MHz range with high side LO and 70 MHz output only, it can be set for low side LO and 140 MHz operation over a limited range as Table 2.1 shows. The PLL will alarm if you try to operate the 2005-22P outside the allowable frequency range shown.

TABLE 2.1 2005-22P DOWNCONVERTER FREQUENCY RANGE FOR VARIOUS SETTINGS			
LO-Side	IF (MHz)	LO Range (MHz)	Allowable Frequency Range (MHz)
C-HIGH	70	1020-2120	950-2050
Ku-LOW	70	1020-1980	1090-2050
C-HIGH	140	1090-2120	950-1980
Ku-LOW	140	1020-1910	1160-2050

2.5.3 Selecting High Side LO (-C), Low Side LO (-Ku), 70MHz or 140 MHz Input - To select High Side LO, Low Side LO, 70MHz or 140 MHz Input set SW5 and SW6 on the front panel (see Figure 2.1) to the desired position.

2.5.4 Selecting the Gain - The gain of the 2005 can be selected for +0 dBm (HI gain) or -20 dBm (LOW gain) with SW7 on the rear panel (see Figure 2.2).

3.0 Environmental Use Information

- A. **Rack-Mounting** - To mount this equipment in a rack, please refer to the installation instructions located in the user manual furnished by the manufacturer of your equipment rack.
- B. **Mechanical loading** - Mounting of equipment in a rack should be such that a hazardous condition does not exist due to uneven weight distribution.
- C. **Elevated operating ambient temperature** - If installed in a closed or multiunit rack assembly, the operating ambient temperature of the rack may be greater than room ambient temperature. Therefore, consideration should be given to Tmra.
- D. **Reduced air flow** - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. Additional space between units may be required.
- E. **Circuit Overloading** - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits could have on over current protection and supply wiring. Appropriate consideration of equipment name plate rating should be used, when addressing this concern.
- F. **Reliable Earthing** - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connection to the Branch (use of power strips).
- G. **Top Cover** - There are no serviceable parts inside the product so, the Top Cover should not be removed. If the Top Cover is removed the ground strap and associated screw **MUST BE REINSTALLED** prior to Top Cover screw replacement. **FAILURE TO DO** this may cause **INGRESS** and/or **EGRESS** emission problems.



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

Printed in USA