


Instruction Manual

Model 2015-5767 Upconverter

September 2025, Rev. 0

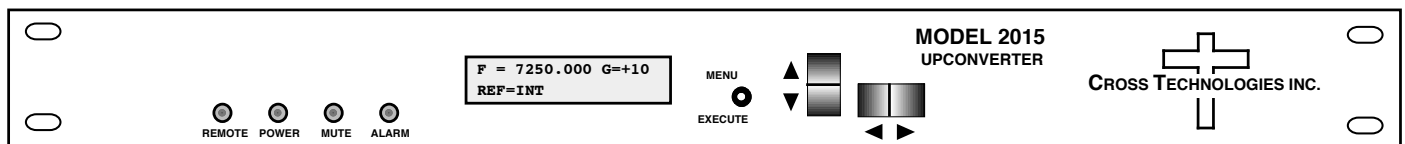

Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., but may be reproduced or duplicated without the prior permission of Cross Technologies, Inc. for purposes of operating the equipment.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

INSTRUCTION MANUAL

MODEL 2015-5767 Upconverter

<u>TABLE OF CONTENTS</u>	<u>PAGE</u>
Warranty	2
1.0 General	3
1.1 Equipment Description	3
1.2 Technical Characteristics	4
1.3 Monitor & Control Interface	5
1.4 Environmental Use Information	10
2.0 Installation	11
2.1 Mechanical	11
2.2 Rear Inputs & Outputs	12
2.3 Front Panel Controls & Indicators	13
2.4 Operation	13
2.5 Menu Settings	15

WARRANTY - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are not other warranties, express or implied, except as stated herein.



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

MODEL 2015-5767 Upconverter

1.0 General

1.1 Equipment Description

The 2015-5767 Upconverter converts 70 ± 18 MHz to 5.725 to 6.725 GHz in 125 kHz steps (1 kHz steps, option X1005) with low group delay and flat frequency response. Synthesized local oscillators (LO) provide frequency selection with ± 0.01 ppm stability. Push button switches select the RF frequency, gain, and other parameters. Front panel LEDs provide indication of DC power (green), remote operation (yellow), PLL alarm (red), or the TX carrier is muted (yellow). Variable attenuators for the IF input and RF output provide a gain range of 0 to +30 dB as adjusted by the front panel pushbutton switches. Remote M&C allows selection of the 10 MHz reference, frequency and gain. Parameter selection and frequency and gain settings appear on the LCD display. Connectors are BNC female for IF input and 10 MHz reference input and output, and Type N female for the RF output (other connector configurations available). The unit is powered by a 100-240 $\pm 10\%$ VAC power supply; and housed in a 1.75" X 19" X 16" rack mount chassis.

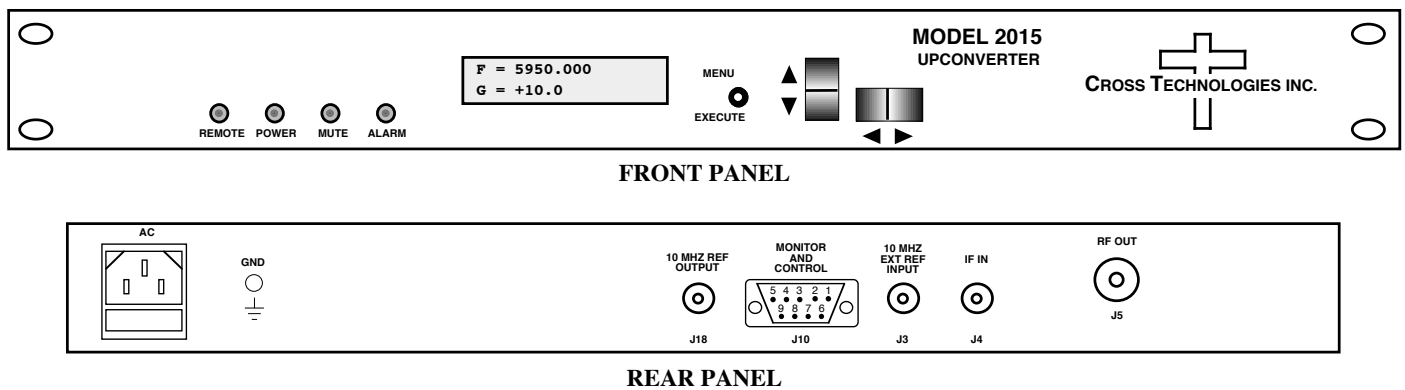


FIGURE 1.1 Model 2015-5767 Front and Rear Panels

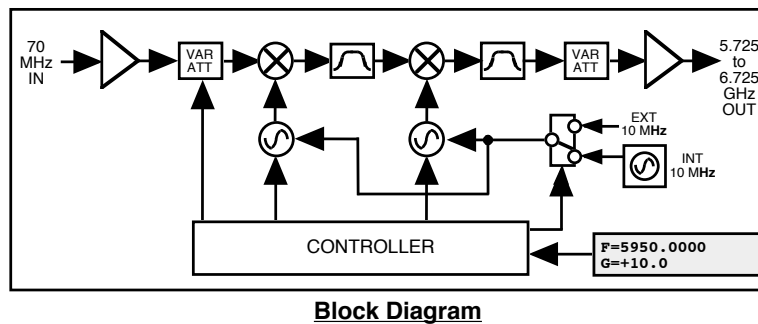


FIGURE 1.2 Model 2015-5767 Upconverter Block Diagram

1.2 Technical Characteristics

TABLE 1.1 2015-5767 Upconverter Specifications*

Input Characteristics	
Impedance / Return Loss	75Ω / 18 dB
Frequency	70 ±18 MHz
Input Level	-30 to -10 dBm
Output Characteristics	
Impedance / Return Loss	50Ω / 14 dB
Frequency (See Models)	5.725 to 6.725 GHz
Output Level	-20 to 0 dBm
Output 1 dB Compression	+10 dBm, at max. gain
Mute	>50 dB @ 0 dBm out
Channel Characteristics	
Gain Max. / range	+30.0 ± 2 dB Max; adjustable from 0 to +30.0 dB, 0.5 ±0.5 dB steps
Frequency Response	± 1.5 dB, 5.725-6.725 GHz; ± 0.5 dB, 36 MHz BW
Spurious Response	< -50 dBc carrier and non-carrier related
Intermod	< -50 dBc for two carriers spaced at Fc ±2 Mhz apart each at -8 dBm out
Group Delay, Maximum	0.015 ns/MHz ² , parabolic, 0.05 ns/MHz, Linear, 1 ns ripple
Frequency Sense	Non-inverting
Synthesizer Characteristics	
Frequency Accuracy	± 0.01 ppm max. over temp external reference; ext ref. input
Frequency Step	125 kHz minimum; 1 kHz steps option X1005
10 MHz In/Out Level	3 dBm, ± 3 dB

Phase Noise @ F (Hz) >	100 MHz	1 kHz	10 kHz	100 kHz	1 MHz
dBc/Hz	-70	-75	-80	-95	-110

Controls, Indicators	
Frequency/Gain Selection	Direct Readout LCD, Pushbutton Switches or Remote Selection
Power; Alarm; Remote; Mute	Green LED, Red LED, Yellow LED, Yellow LED
Remote	RS232C, 9600 baud (options; RS485, Q; Ethernet)
Other	
RF / IF Connector	Type N (female) 50Ω / BNC (female) 75Ω, Others optional
10 MHz Connectors	BNC (female), 75Ω works with 50 or 75 ohms
Alarm/Remote Connectors	DB9 - NO or NC Contact Closure on Alarm
Size	19 inch, 1RU Standard Chassis 1.75" high X 16.0" deep
Power	100-240 ±10% VAC, 47-63 Hz, 45 watts maximum

Available Options	
- Z	Attenuator 0.1 dB on Upconverter
Remote M&C Interfaces:	
- Q	RS485/422
- W8	Ethernet with Web Browser
- W18	Ethernet with Web Browser & SNMP
- W28	Ethernet with TCP/IP, Telnet®
- W828	W8 + W18 + 28
Contact Cross Technologies for other available options.	


*10°C to 40°C; Specifications subject to change without notice.

© 2020 Cross Technologies, Inc.

1.3 Monitor and Control Interface

A) Remote Serial Interface

Protocol: RS-232C, 9600 baud rate, no parity, 8 data bits, 1 start bit, and 1 stop bit.
(RS-232C standard, RS-422/RS-485 - Option -Q)

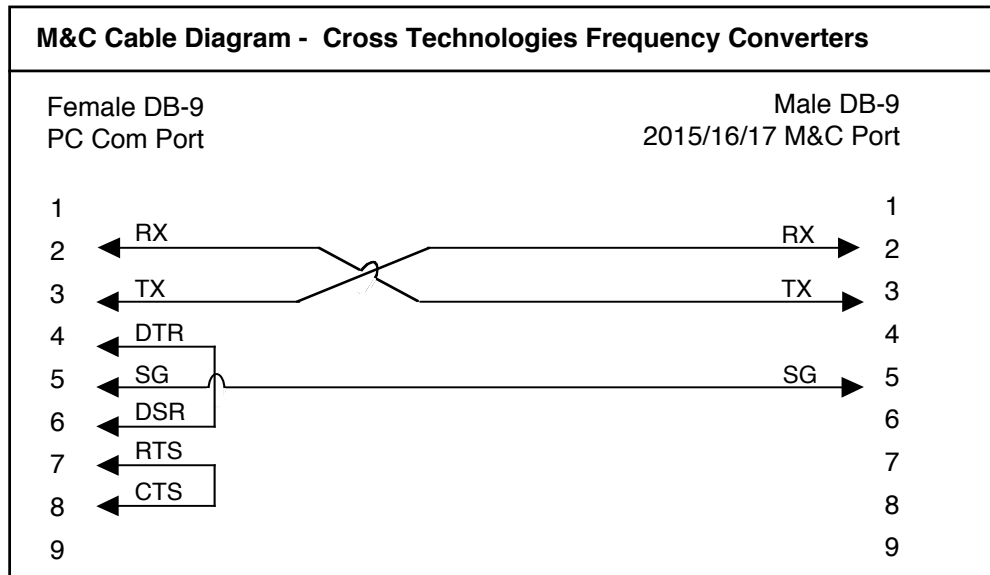

Connector - Rear panel, DB-9 female

Pinouts (RS-485/422/232C)

Pin	Description
1	Rx-
2	Rx+ (RS-232C)
3	Tx+ (RS-232C)
4	Tx-
5	Ground
6	Alarm Relay - Common
7	Alarm Relay - Normally Open
8	Not Used
9	Alarm Relay - Normally Closed

B) Status Requests -

Table 1.3 lists the status requests for the 2015-5767 and briefly describes them.

*** PLEASE NOTE: The two character {aa}{00-31} prefix, in the table below, should be used ONLY when RS-485, (OPTION-Q), is selected.**

Status Requests specific to a switch must be preceded by *i where i is the switch number.

Note: "Legacy" commands are supported for compatability with older designs.

[illegible]

Table 1.3 2015-5767 Status Requests Continued[illegible]

C) Commands -

Table 1.2 lists the commands for the 2015-5767 and briefly describes them.

After a command is sent the 2015-5767 sends a return ">" indicating the command has been received and executed.

General Command Format - The general command format is {aaCND...}, where:

{ = start byte

aa = Address (**RS-485 only**)

C = 1 character, either C (command) or S (status)

N = 1-digit command or status character

D = 1 character or more of data (depends on command)

} = stop byte

*** PLEASE NOTE:** The two character {aa}(00-31) prefix, in the following table, should be used **ONLY** when RS-485, (OPTION-Q), is selected.

Table 1.2 2015-5767 Commands

Command	Syntax	Description
Set Frequency	{aaC1xxxxxx}	where:
		aa = unit address, range = 00 to 31, only used if interface is RS485, otherwise omit
		1 = command code
		xxxxxxx = desired switch output frequency in kHz.
		This value must be a multiple of 125 kHz.
		Range: 5725000 to 6725000
		example: {C15850125}
		Will set the output frequency to 5850.125 MHz
		The unit will reply with the '>' character if the command is successfully processed.
Set Gain	(aaC3xxx)	where:
		aa = unit address, range = 00 to 31, only used if interface is RS485, otherwise omit
		3 = command code
		xxx = Gain in dB. This value must be in 0.5 dB steps, omit the decimal point.
		Range: 0 to 300 dB in 0.5 dB steps.
		example: {C3125}
		Will set the gain to 12.5 dB.
		The unit will reply with the '>' character if the command is successfully processed.
Set Mute	(aaCAx)	where:
		aa = unit address, range = 00 to 31, only used if interface is RS485, otherwise omit
		A = command code
		x = 1 to enable the output, x = 0 to disable (mute) the output
		The unit will reply with the '>' character if the command is successfully processed.
Set External Reference	(aaCEx)	where:
		aa = unit address, range = 00 to 31, only used if interface is RS485, otherwise omit
		E = command code
		x = 1 to select external reference, x = 0 select internal reference
		The unit will reply with the '>' character if the command is successfully processed.

1.4 Environmental Use Information

- A. Rack-Mounting** - To mount this equipment in a rack, please refer to the installation instructions located in the user manual furnished by the manufacturer of your equipment rack.
- B. Mechanical loading** - Mounting of equipment in a rack should be such that a hazardous condition does not exist due to uneven weight distribution.
- C. Elevated operating ambient temperature** - If installed in a closed or multiunit rack assembly, the operating ambient temperature of the rack may be greater than room ambient temperature. Therefore, consideration should be given to Tmra (Maximum Recommended Ambient Temperature).
- D. Reduced air flow** - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. Additional space between units may be required.
- E. Circuit Overloading** - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits could have on over current protection and supply wiring. Appropriate consideration of equipment name plate rating should be used, when addressing this concern.
- F. Reliable Earthing** - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connection to the Branch (use of power strips).
- G. Top Cover** - There are no serviceable parts inside the product so, the Top Cover should not be removed. If the Top Cover is removed the ground strap and associated screw **MUST BE REINSTALLED** prior to Top Cover screw replacement. **FAILURE TO DO** this may cause **INGRESS** and/or **EGRESS** emission problems.

2.0 Installation

2.1 Mechanical

The 2015-5767 consists of one RF/Controller PCB which is housed in a 1 RU (1 3/4 inch high) by 16 inch deep chassis. A switching, ± 12 , +24, +5 VDC power supply provides power for the assembly. The 2015-5767 can be secured to a rack using the 4 holes on the front panel. Figure 2.1 shows how the 2015-5767 is assembled.

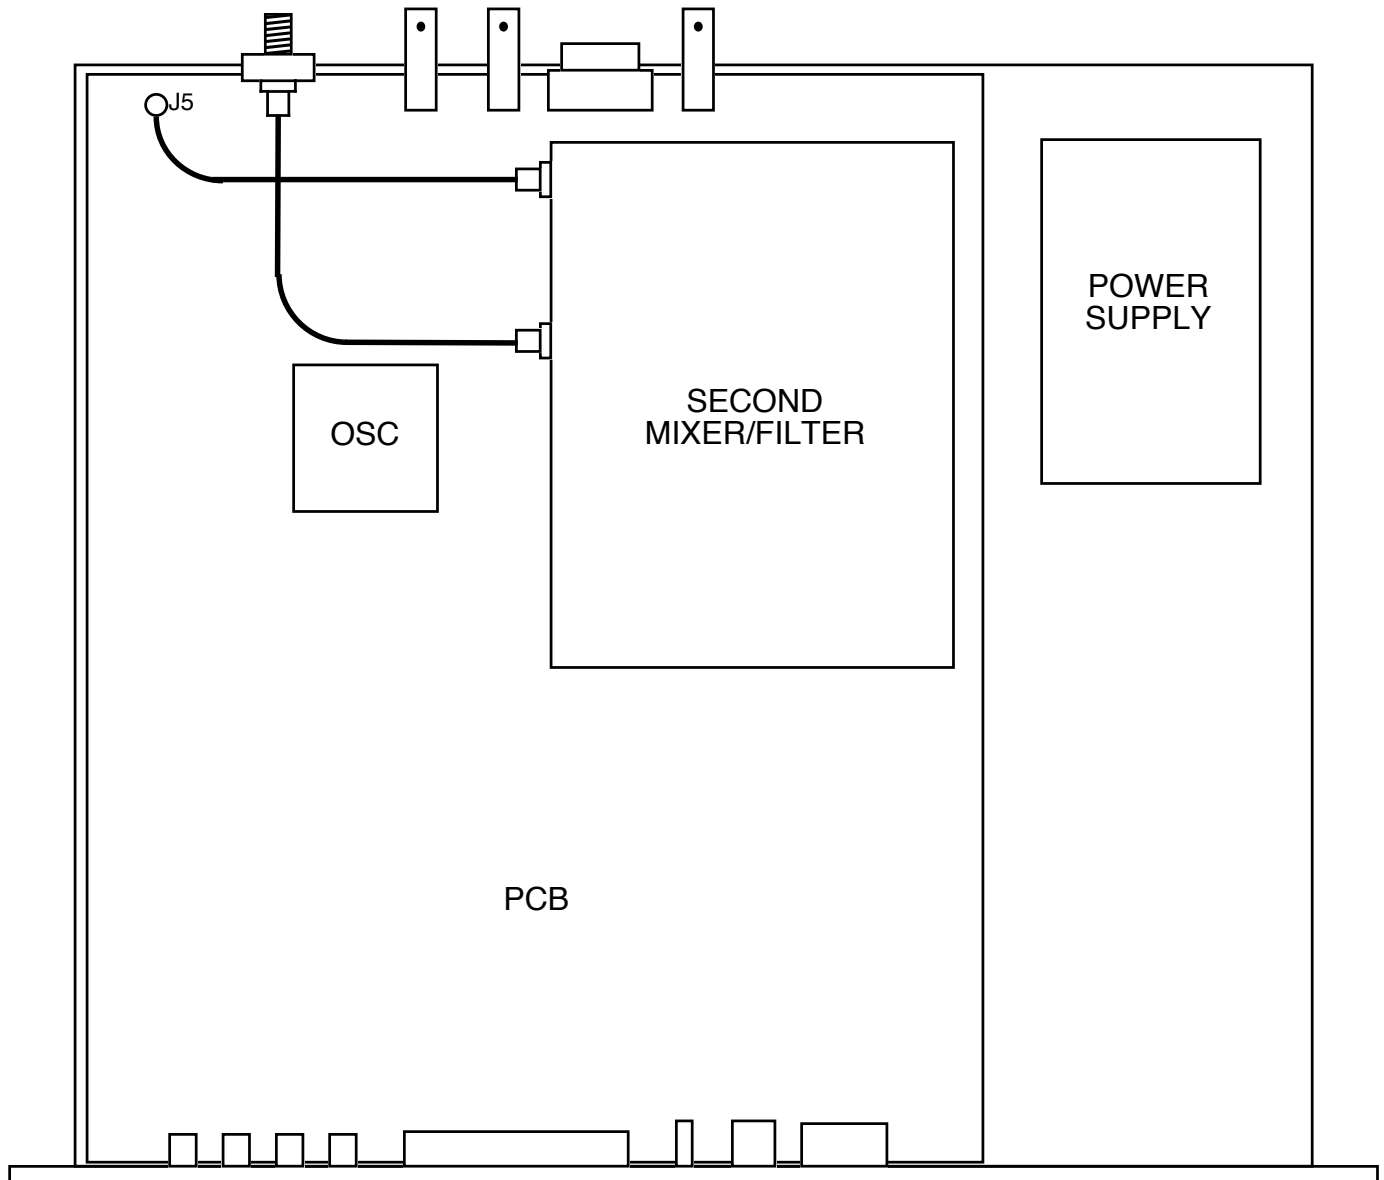


FIGURE 2.1 2015-5767 Mechanical Assembly

2.2 Rear Panel Input / Output Signals - Figure 2.2 shows the input and output connectors on the rear panel.

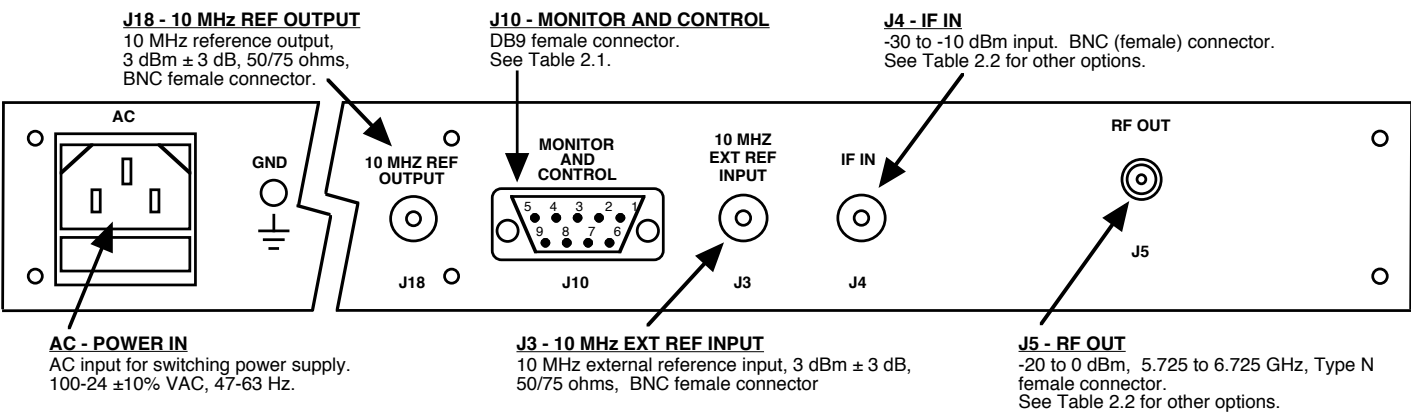


FIGURE 2.2 2015-5767 Rear Panel Inputs and Outputs

TABLE 2.1 J10 Pinouts (RS-232C/422/485*)	
Pin	Function
1	Rx-
2	Rx+ (RS-232C)
3	Tx+ (RS-232C)
4	Tx-
5	GND
6	Alarm Relay: Common
7	Alarm Relay: Normally Open
8	Not Used
9	Alarm Relay: Normally Closed

TABLE 2.2 IF/RF Connector Options		
Option	IF	RF
STD	BNC, 75 Ω	N-Type, 50 Ω
-S	BNC, 50 Ω	SMA, 50 Ω
-S7	BNC, 75 Ω	SMA, 50 Ω
-SS	SMA, 50 Ω	SMA, 50 Ω
-M	BNC, 50 Ω	N-Type, 50 Ω

*Interface: DB-9 Female
Protocol: RS232C or (option Q) RS422/RS485, 9600 baud rate, no parity, 8 data bits, 1 start bit, 1 stop bit

2.3 Front Panel Controls and Indicators - Figure 2.3 shows the front panel controls and indicators.

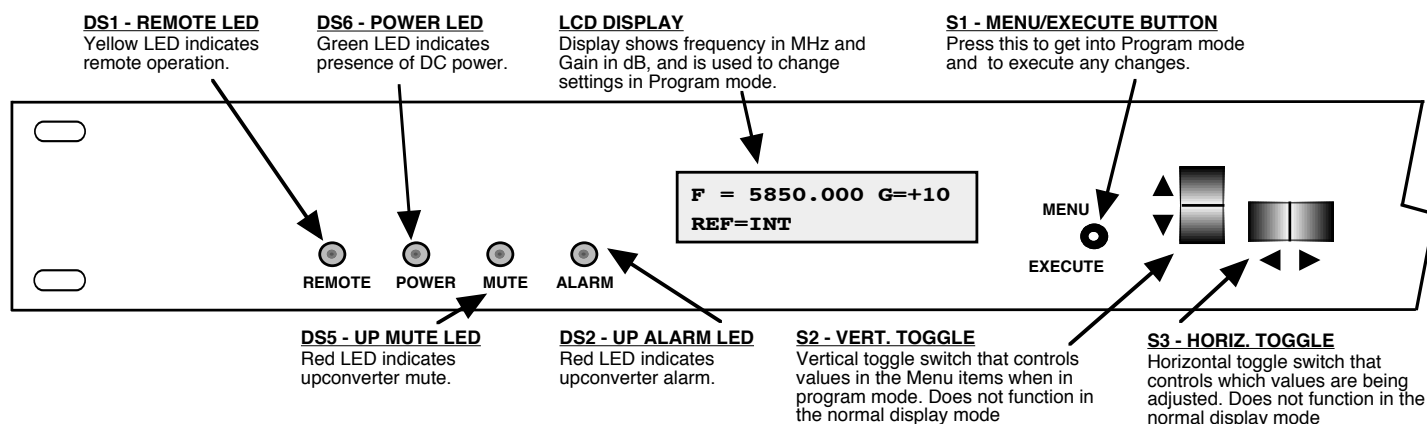


FIGURE 2.3 2015-5767 Front Panel Controls and Indicators

2.4 Installation / Operation

2.4.1 Installing and Operating the 2015-5767 Upconverter

1. Connect a -30 dBm to -10 dBm, 70 MHz signal to IF IN, J4 (Figure 2.2)
2. Connect RF OUT, J5, to the external equipment.
3. Connect 100- 240 $\pm$ 10% VAC, 47 - 63 Hz to AC input on the back panel.
4. Set the desired output frequency (See Section 2.5 Menu Settings).
5. Set the input level (See Section 2.5 Menu Settings).
6. Set the gain for +10 to +30 dB. ***Make sure the output stays within -20 to 0 dBm with the gain selected and the input level provided. If the combination of gain and input level settings produce an output outside of the -20 to 0 dBm range than the spurious and 1dB compression performance may be compromised.***
7. Be sure DS6 (green, DC Power) is on and DS2 (red, Alarm) is off (Figure 2.3).
8. **AC Fuse** - The fuse is a 5 mm X 20 mm, 2 amp slow blow (Type T) and is inserted in the far slot in the drawer below the AC input as shown in Figure 2.4. There is a spare fuse in the near slot. If a fuse continues to open, the power supply is most likely defective.

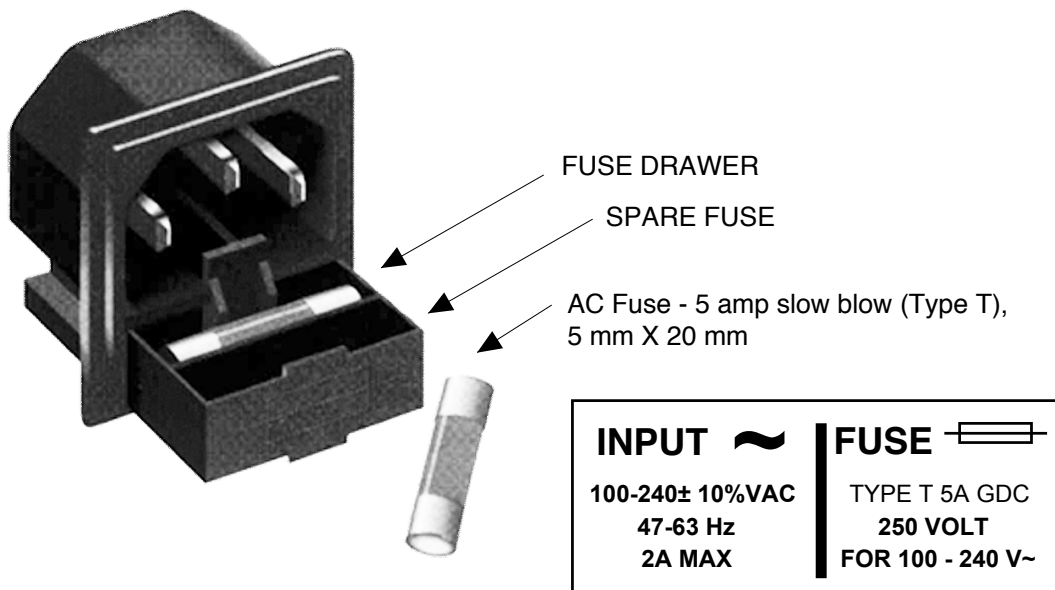


FIGURE 2.4 Fuse Location and Spare Fuse

2.5 Menu Settings

2.5.1 Functions - This section describes operation of the front panel controls. There are three operator switches, the LCD display and alarm indicator LEDs. All functions for the equipment are controlled by these components. The functions are (see Figure 2.5):

Power Up

Normal Display

Menu 1	Frequency in MHz
Menu 2	Input Level in dBm (-10 to -30)
Menu 3	Gain in dB (+10 to +30 dB)
Menu 4	Mute TX Signal
Menu 5	Set Unit to Remote Operation
Menu 6	Select External 10 MHz Reference
Menu 7	Select RS232, RS422, or RS485 Remote Operation (option Q)
Menu 8	Select RS485 Remote Address for Unit (option Q)

Save Menu When “R” is selected in any of the above menus or when operator reaches the end

Alarm indications appear on the LEDs (see figure 2.2).

All program changes must start with the operation of the Menu/Execute switch and must also end with the operation of the Menu/Execute switch verified by the “Save Settings?” Menu. If this sequence is not followed, none of the changes will take effect. If programming is initiated and no operator action takes place for approximately 12 seconds (before the final press of the Menu/Execute switch) the display will revert to its previous status and you will need to start over.

2.5.2. Power On Settings


NOTE: The last status of a unit is retained even when power is removed. When power is restored, the unit will return to it's previous settings.

When power is first applied, the LCD display goes through three steps.

- 1.The LCD goes black to show all segments are functioning.
- 2.The software version will be displayed.

A rectangular LCD display showing the text "REV 1.00" in a bold, sans-serif font. The background of the display is light gray, and the text is black.

- 3.The present frequency, gain, and selected RF output of the upconverter is shown.

A rectangular LCD display showing two lines of text. The first line is "F = 5850.000" followed by "G=+10". The second line is "REF=INT". The text is in a bold, sans-serif font. The background of the display is light gray, and the text is black.

The unit is now operational and ready for any changes the operator may desire.

2.5.3 Control Switches

1. **Menu/Execute** - Any change to the programming of the unit must be initiated by pressing the Menu/Execute switch and completed by pressing the Menu/Execute switch.
2. **Horizontal Switch** - This switch is mounted so its movement is horizontal and moves the cursor left or right.
3. **Vertical Switch** - This switch is mounted so its movement is vertical and has two functions:
 - A. During frequency, gain changes, the vertical movement will raise or lower the number in the direction of the arrows.
 - B. For other functions such as Mute on/off, the vertical switch will alternately turn the function on or off regardless of the direction operated.

2.5.4 Frequency Changes

At any time during the modification process, if you have made a mistake and do not wish to save the changes you have made, **do not press the Menu/Execute switch**; simply do nothing for approximately 12 seconds, and the system will return to the normal operating mode or scroll to “**R**” and push the menu/Execute switch and select “**NO**” in the “**SAVE SETTINGS?**” window.

To change the FREQUENCY:

Operate the Menu/Execute switch until you get to the menu item you want to change see Figure 2.5 for the sequence of menu options. The following display is for changing the upconverter frequency:

F = 5850.000	R
---------------------	----------

Pressing the Up/Down switch down will toggle the display to:

F = 58<u>5</u>0.000	R
----------------------------	----------

By using the horizontal rocker switch the cursor can be moved left or right .

F = 58<u>5</u>0.000	R
----------------------------	----------

NOTE: CHANGES DO NOT TAKE PLACE ON FREQUENCY UNTIL YOU GO TO THE SAVE MENU AND INDICATE YOU WANT TO SAVE THE CHANGES. THE CARRIER IS MUTED WHEN FREQUENCY IS CHANGED.

When the display indicates the value desired you can push the Menu/Execute switch to the next item:

INLVL = -1<u>0</u>	R
---------------------------	----------

OR you can scroll to “R”, push the Menu/Execute switch to get to:

SAVE SETTINGS? <u>Y</u> N

Selecting **Y** will save the new settings. Selecting **N** will revert to the previous settings.

Pushing the Menu/Execute switch then takes you to the default display:

F = 5850.000 G=+10
REF=INT

Figure 2.5 shows all the menu items and how to make changes.

2.5.5 Gain Changes

When you get to this menu note that the gain changes will be made as you make them but if you do not wish to save the changes you have made, scroll to “**R**” and push the menu/Execute switch and select “**NO**” in the “**SAVE SETTINGS?**” window or **do not press the Menu/Execute switch**; simply do nothing for approximately 12 seconds, and the system will return to the normal operating mode.

To change the GAIN, first push the Menu/Execute switch to get to the gain setting:

Operate the Menu/Execute switch until you get to the menu item you want to change (see Figure 2.5 for the sequence of menu options). The following display is for changing the upconverter input level. This is an important setting to optimize spurious and should be made as accurately as possible:

INLVL = -1<u>0</u>	R
---------------------------	----------

NOTE: CHANGES TAKE PLACE ON LEVEL AND GAIN IMMEDIATELY BUT DO NOT GET SAVED UNTIL YOU GO TO THE SAVE MENU AND INDICATE YOU WANT TO SAVE THE CHANGES.

Press the Up/Down switch to change the level in 1 dB steps and then push the Menu/Execute switch to get to the Gain setting:

G = +<u>1</u>0	R
-----------------------	----------

Press the Up/Down switch to change the gain in 1 or 10 dB steps:

G = +<u>1</u>5	R
-----------------------	----------

By using the horizontal rocker switch the cursor can be moved left or right. Pressing the Up/Down switch down will toggle the display digit selected until you have the desired gain.

NOTE: THE GAIN WILL BE CHANGED AS YOU ADJUST THE NUMBERS. HOWEVER, THE VALUE WILL NOT BE STORED UNTIL YOU INDICATE YES IN THE SAVE SETTINGS WINDOW. DO NOT SET A GAIN THAT WOULD EXCEED -10 dBm OR HAVE LESS THAN -30 dBm OUTPUT LEVEL. THE FIRMWARE DOES PREVENT YOU FROM THIS.

When the display indicates the value desired you can push the Menu/Execute switch to the next item OR you can scroll to “**R**”, push the Menu/Execute switch to get to:

SAVE SETTINGS? <u>Y</u> N

Selecting **Y** will save the new settings. Selecting **N** will revert to the previous settings.

Pushing the Menu/Execute switch then takes you to:

F = 7250.000 G=+10
REF=INT

Figure 2.5 gives the menu items and how to make changes

2.5.5 Alarm Indications

An alarm condition will occur if the local oscillator phase lock loop (PLL) comes out of lock. The Mute LED will light if you select to mute the Tx Signal and the Remote LED will light when you select the Remote mode.

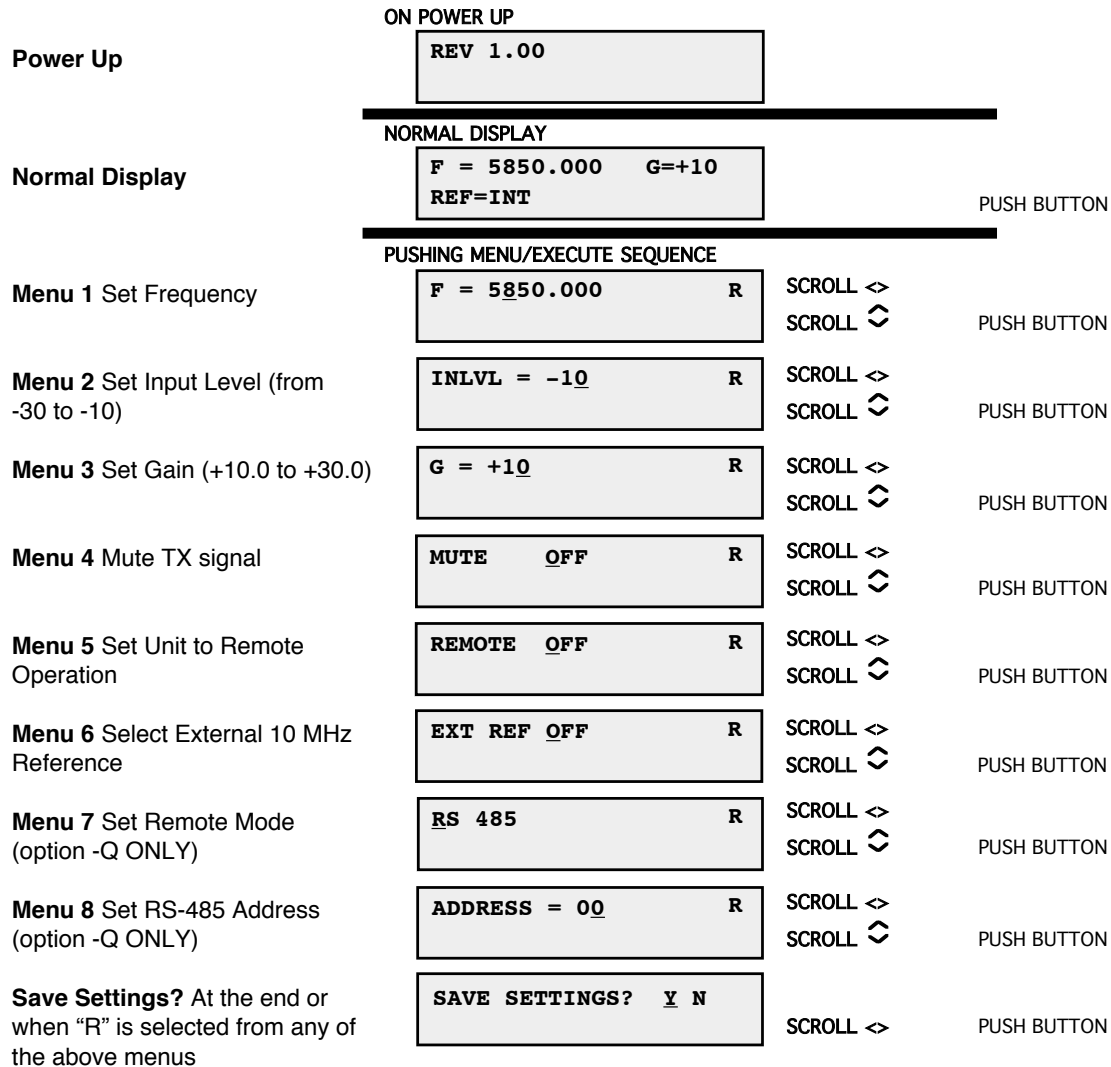


FIGURE 2.5 Menu Display and Sequence



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

Printed in USA