

INSTRUCTION MANUAL

MODEL 1582-45L SWITCH

Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., but may be reproduced or duplicated without the prior permission of Cross Technologies, Inc. for normal operation related purposes.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.

First Edition, **December 2002**

**CROSS TECHNOLOGIES, INC.
6170 SHILOH ROAD
ALPHARETTA, GEORGIA 30005**

**(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588**

**WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com**

INSTRUCTION MANUAL MODEL 1582-45L SWITCH

<u>TABLE OF CONTENTS</u>	<u>PAGE</u>
Warranty	2
1.0 General	3
1.1 Equipment Description	3
1.2 Technical Characteristics	4
2.0 Installation	5
2.1 Mechanical	5
2.2 Rear Panel Signals	6
2.3 Front Panel Controls, Indicators	7
2.4 Operation	7

WARRANTY - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are not other warranties, express or implied, except as stated herein.

**CROSS TECHNOLOGIES, INC.
6170 SHILOH ROAD
ALPHARETTA, GEORGIA 30005**

**(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588**

**WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com**

MODEL 1582-45L Switch

1.0 General

1.1 Equipment Description - The 1582-45L provides remote or local latched relay switching between CH1, CH2, CH3 and CH4 data signals. The maximum data rate is 1 Mbps on the clock and data lines (8 lines) and up to 56 kbps on all other lines. Remote selection of CH1 to CH4 is by a contact closure to ground of the corresponding selection pin when the SELECT switch on the front panel is set to REMOTE. Local Selection of CH1 to CH4 is by push button switches on the front panel when the SELECT switch on the front panel is set to LOCAL. When in LOCAL operation all remote commands will be disabled, and when in REMOTE operation all the push buttons on the front panel will be disabled.

On power loss the selected channel remains on. LEDs and contact closures to ground indicate the channels selected and REMOTE or LOCAL operation. The 1582-45L Switch is housed in a 1 3/4" X 19" X 12" deep rack mount chassis.

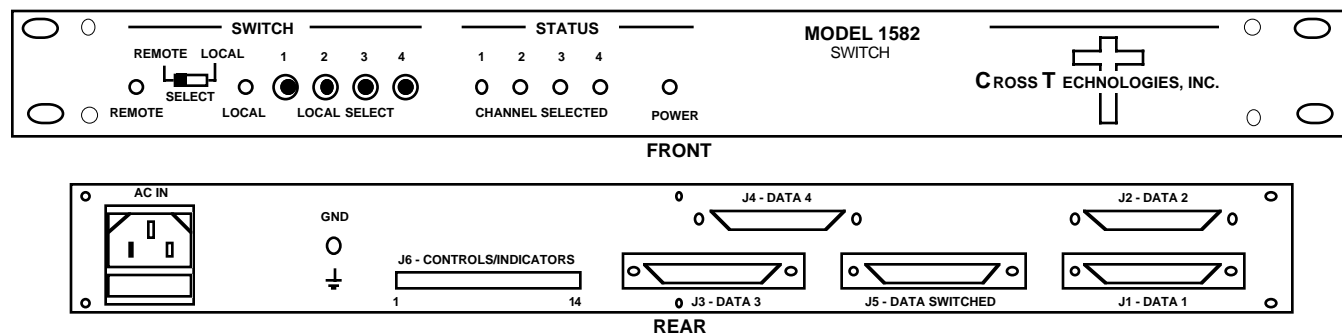


FIGURE 1.1 Model 1582-45L Front and Rear Panels

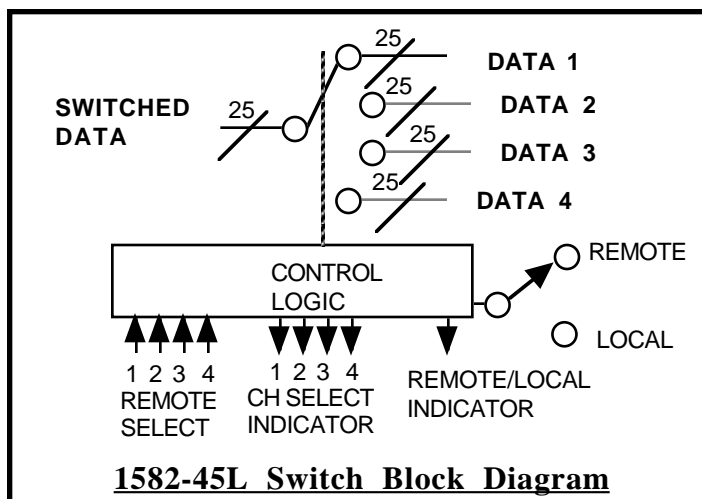


FIGURE 1.2 Model 1582-45L Block Diagram

1.2 Technical Characteristics

TABLE 1.1 1582-45L Switch Specifications*

Data Characteristics

Input/Output	RS422 or RS232
Data Rate, max.	1 Mbps on clock and data lines up to 56 kbps on other lines
Pins Switched	All 25

Switch Characteristics

Type	Latching Relay
Data Direction	Both ways, non-blocking
Isolation	40 dB, min.
Switch time	10 milliseconds, max.
Contact resistance	10 Ω max., < 1 Ω typ.
Configuration	25P4T

Controls and Indicators

LOCAL/REMOTE Switch	Slide switch selects between LOCAL and REMOTE operation
LOCAL CH Select	Push button switches locally select CH1, CH2, CH3, or CH4
LEDs	CH1, CH2, CH3, CH4 ON-LINE; POWER; LOCAL; REMOTE

Other

Connector, Alarm/Control	Barrier Strip
Connectors, Data	DB25, female
Mechanical	19 inch standard chassis 1.75" high X 12" deep
Power	Single AC Power Supply; 90 - 260 VAC, 47 - 63 Hz, 30 W

*+10 to +40 degrees C; Specifications subject to change without notice

2.0 Installation

2.1 Mechanical - The 1582-45L consists of one printed circuit board (PCB) housed in a 1 RU (1 3/4 inch high) by 12 inch deep chassis. A single power supply provides +5V and +15V DC power to the PCB. Connectors are DB25, female for the data connections and a barrier strip for the controls/indicators. The 1582-45L can be secured to a rack using the 4 holes on the front panel. Figure 2.1 shows how the 1582-45L is assembled. J6 connects DC Power to the PCB as shown and J2 and J4 are connected to the rear panel DB25 connectors via a ribbon cable.

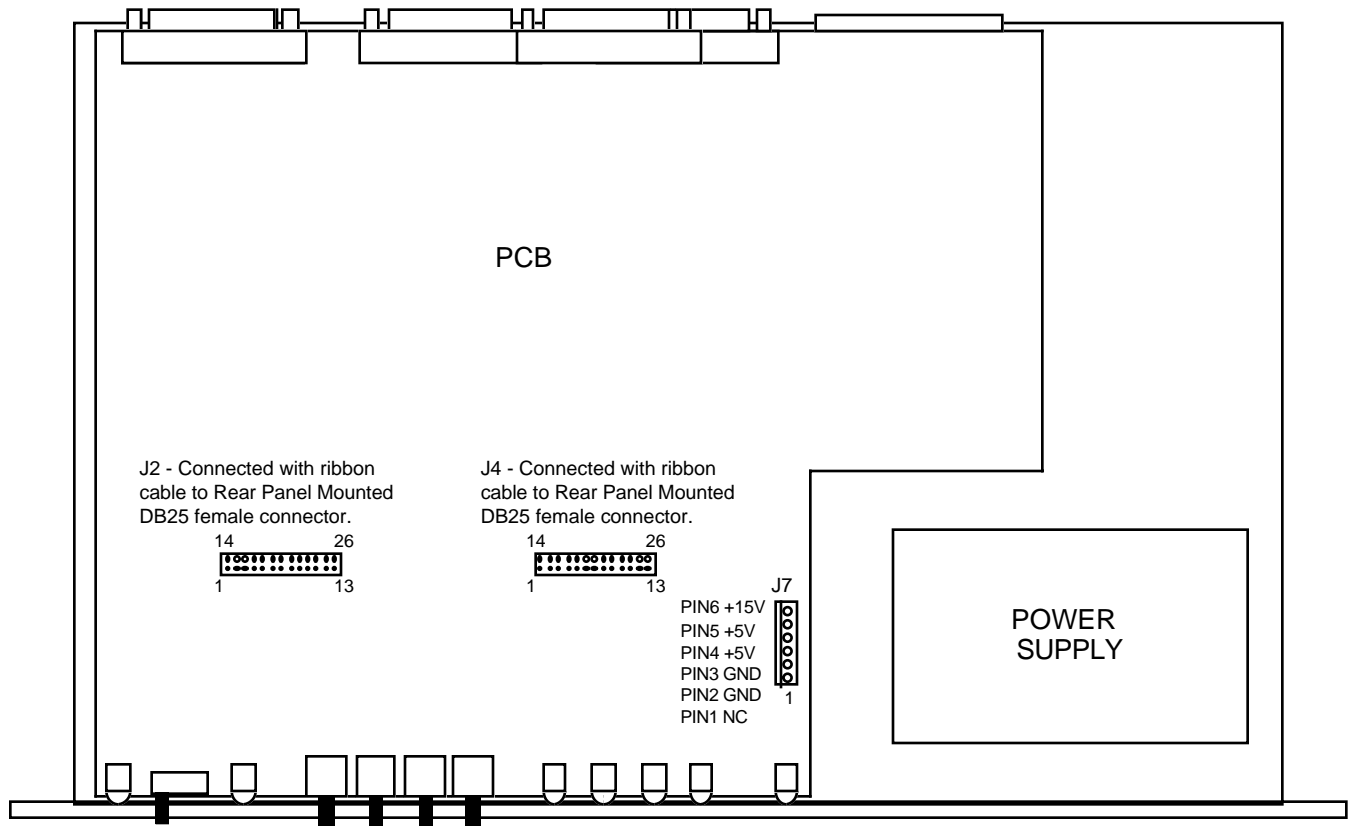


FIGURE 2.1 1582-45L Mechanical Assembly

2.2 Rear Panel Signals - The input/output and control/indicator connectors located on the rear panel are shown in Figure 2.2. In order to select CH1 to CH4 remotely, switch SW5 on the front panel must be set to REMOTE operation. With SW5 set to REMOTE operation, the local push button switches on the front panel will be disabled.

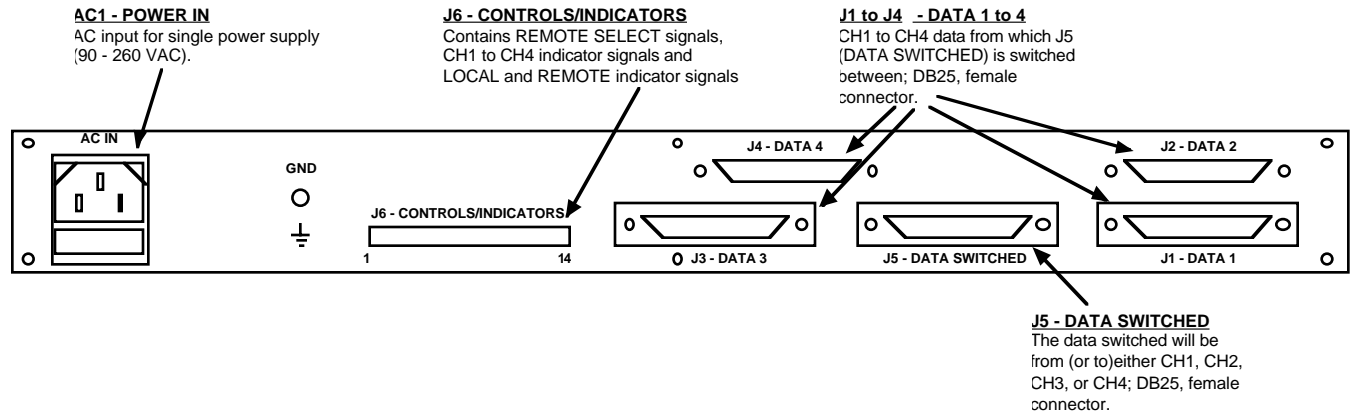


FIGURE 2.2 1582-45L Rear Panel Signals

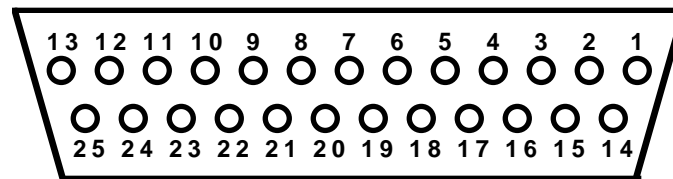


FIGURE 2.3 DB25, Female Connector Pinout

TABLE 2.1 J1,J2,J3,J4,J5 Pinout (Data, DB25 - Figure 2.3)

Function	Pin #	Description
CLOCK/DATA	2,3,9,11,14,16,17,24	1 Mbps RS422 clock/data lines
OTHER	1,4,5,6,7,8,10,12,13,15, 18,19,20,21,22,23,25	56 kbps data/other lines

TABLE 2.2 J6 Pinout (Controls and Indicators, Barrier Strip)

Function	Pin #	Description
CH1 SELECT	1	Closure to ground and switch SW5 set to REMOTE selects CH1
CH2 SELECT	3	Closure to ground and switch SW5 set to REMOTE selects CH2
CH3 SELECT	5	Closure to ground and switch SW5 set to REMOTE selects CH3
CH4 SELECT	7	Closure to ground and switch SW5 set to REMOTE selects CH4
CH1 ONLINE	9	*Relay closure to ground (<5Ω) indicates CH1 is selected
CH2 ONLINE	10	*Relay closure to ground (<5Ω) indicates CH2 is selected
CH3 ONLINE	11	*Relay closure to ground (<5Ω) indicates CH3 is selected
CH4 ONLINE	12	*Relay closure to ground (<5Ω) indicates CH4 is selected
LOCAL ALARM	13	**Open collector output (<5Ω) to ground when in LOCAL operation
REMOTE ALARM	14	**Open collector output (<5Ω) to ground when in REMOTE operation
GND	2,4,6,8	Ground

*Max voltage able to be connected to this is +30VDC @ 100ma

**Max voltage able to be connected to this is +20VDC @ 30ma

2.3 Front Panel Controls and Indicators - Figure 2.4 shows the controls and indicators located on the front panel. When switch SW5 is set to REMOTE operation, the push button selection switches, SW1-SW4, on the front panel are disabled. When switch SW5 is set to LOCAL operation the push button switches, SW1-SW4, will be enabled and all remote control will be disabled.

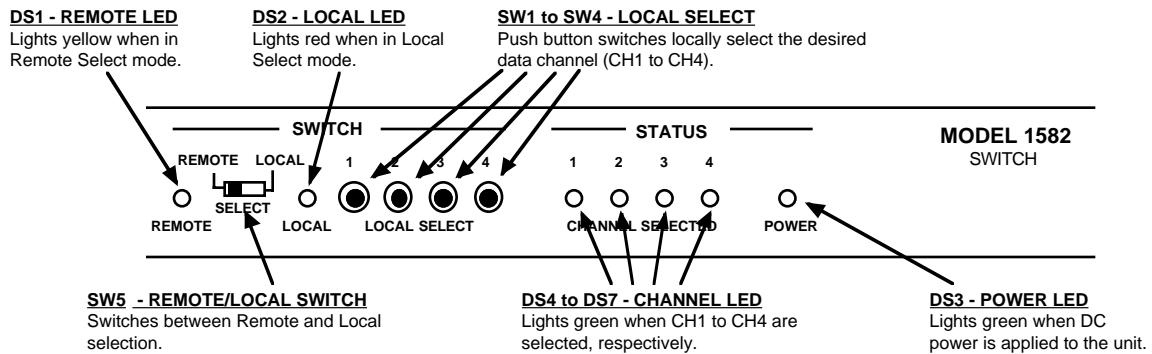


FIGURE 2.4 1582-45L Front Panel Controls and Indicators

2.4 Operation

2.4.1 Installing and Operating the 1582-45L

- 1.) Install the 1582-45L in the equipment rack.
- 2.) Connect data to the DB25 DATA connectors, J1 - J5 (Figure 2.2).
- 3.) Connect to signals on the CONTROLS/INDICATORS connector, J6, as desired (Figure 2.2).
- 4.) Connect 90 - 260 VAC, 47 - 63 Hz to AC IN on the back panel (Figure 2.2).
- 5.) Be sure the POWER LED, DS3, is on (Figure 2.4).
- 6.) Set SW5 for REMOTE or LOCAL operation (Figure 2.4).
- 7.) Choose the desired data path either remotely (J6, Figure 2.2) or locally using the push buttons (SW1 - SW4, Figure 2.4) and check for proper data flow and that the appropriate CHANNEL LED (DS4 - DS7, Figure 2.4) is lit.
- 8.) **AC Fuse** - The fuse is a 5 mm X 20 mm, 2 amp slow blow (Type T) and is inserted in the far slot in the drawer below the AC input as shown in Figure 2.5. There is a spare fuse in the near slot. If a fuse continues to open, the power supply is most likely defective.

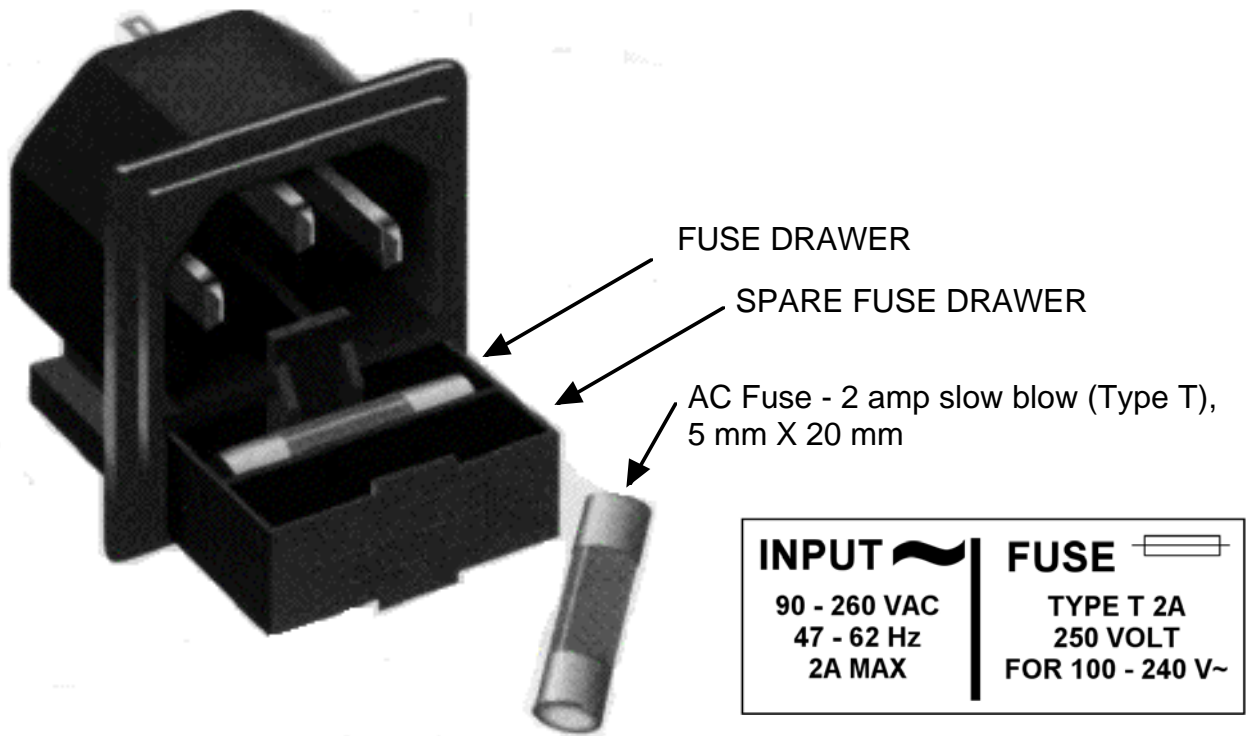


FIGURE 2.5 Fuse Location and Spare Fuse