

INSTRUCTION MANUAL

MODEL 1584-29S RF Splitter

Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., and may not be reproduced or duplicated in any form without the prior permission of Cross Technologies, Inc.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.

First Edition, **September 2002** **Rev 0**
 November 2006 **Rev A**

CROSS TECHNOLOGIES, INC.
6170 SHILOH ROAD
ALPHARETTA, GEORGIA 30005

(770) 886-8005
FAX (770) 886-7964

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

INSTRUCTION MANUAL
MODEL 1584-29S RF Splitter

<u>TABLE OF CONTENTS</u>	<u>PAGE</u>
Warranty	2
1.0 General	3
1.1 Equipment Description	3
1.2 Technical Characteristics	4
2.0 Installation	5
2.1 Mechanical	5
2.2 Rear Panel Input/Output Connectors	6
2.3 Front Panel Monitors and Indicators	6
2.4 Operation	7

WARRANTY - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are no other warranties, express or implied, except as stated herein.

CROSS TECHNOLOGIES, INC.
6170 SHILOH ROAD
ALPHARETTA, GEORGIA 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

MODEL 1584-29S RF Splitter

1.0 General

1.1 Equipment Description

The Model 1584-29S is two nine-way, 0.95 - 2.05 GHz, 0 dB gain splitters in a 1 Rack Unit chassis with a single 115 VAC power supply. Each splitter provides surge protection and excellent RF characteristics. Each splitter has a monitor connector on the front panel and eight outputs on the back panel. One 115 VAC input power supply provides +24 VDC voltage for internal amplifiers. A surge suppressor on each splitter input protects against high voltage transients. All splitter outputs are AC coupled so no DC appears on their center conductors. On the front panel, a green LED indicates the presence of power from the +24 VDC power supply.

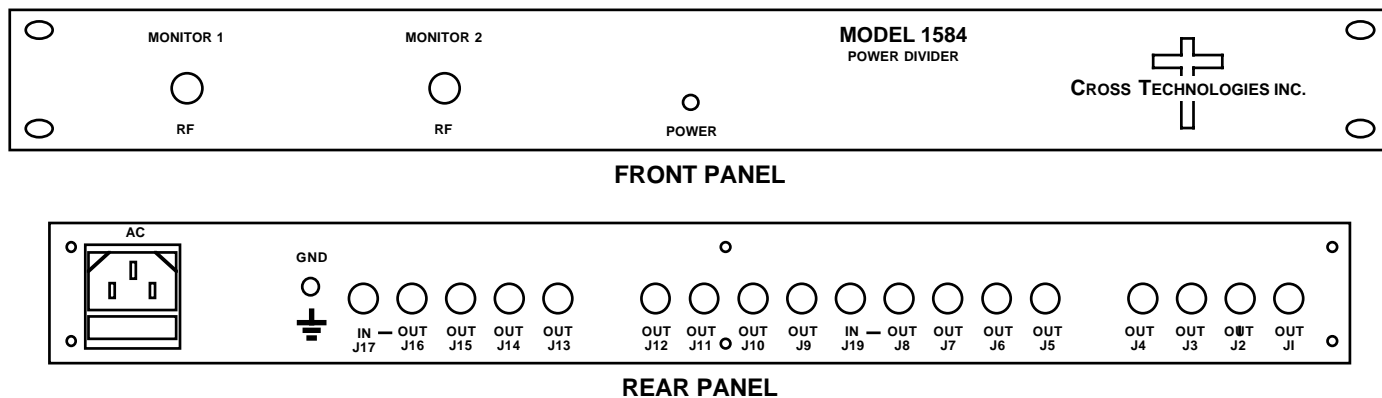


FIGURE 1.1 MODEL 1584-29S Front and Rear Panels

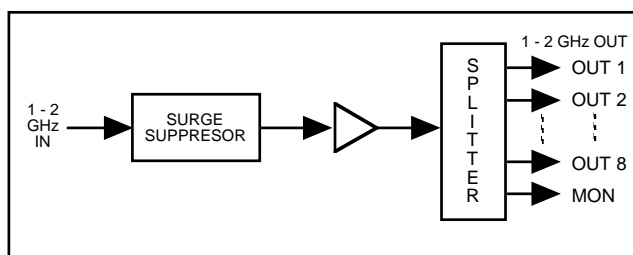


FIGURE 1.2 MODEL 1584-29S Block Diagram (Each Splitter)

1.2 Technical Characteristics

EQUIPMENT SPECIFICATIONS*

Input Characteristics

Impedance	75 Ω
Return Loss	10dB min, 0.95-2.05 GHz; 14dB typ, 0.95-1.75 GHz
Input Level	-20 dBm total maximum

Output Characteristics

Impedance	75 Ω
Return Loss	10dB min, 0.95-2.05 GHz; 14dB typ, 0.95-1.75 GHz

In-Band Characteristics

Gain	0 dB \pm 1.0 dB
Frequency Response	\pm 1.0 dB, 0.95 - 2.05 GHz; \pm 0.5 dB, any 20 MHz incr
Port to Port Isolation	> 18 dB, min., 20 dB typ.
Coupler to Coupler Isol.	> 35 dB, min., 40 dB typ

Indicators

Power	Green LED
-------	-----------

Other

Surge Suppressor	SiDACTOR
RF connectors	Type F (female) see TABLE 2.1 for other options
Fuse - AC	5mm, 2 amp, fast blo
AC Power	90 - 260 VAC, 47 -63 Hz, 30 watts max
Mechanical	19 inch standard chassis 1.75"high X 12" deep

Options

R	Redundant power supplies
Connectors	see TABLE 2.1

*+10°C to +40°C; 2000 meters max elevation; 80% max humidity; Pollution Degree 2; Specifications subject to change without notice.

2.0 Installation

2.1 Mechanical

The 1584-29S consists of one RF printed circuit board (PCB) housed in a 1 RU (1 3/4 inch high) by 12 inch deep chassis. One +24 VDC power supply provides power for the internal amplifiers and LED. Connectors are type F, female for the RF connections. The 1584-29S can be secured to a rack using the 4 holes on the front panel. Figure 2.1.shows how the 1584-29S is assembled. J29 connects the DC voltage from the power supply to the PCB as shown.

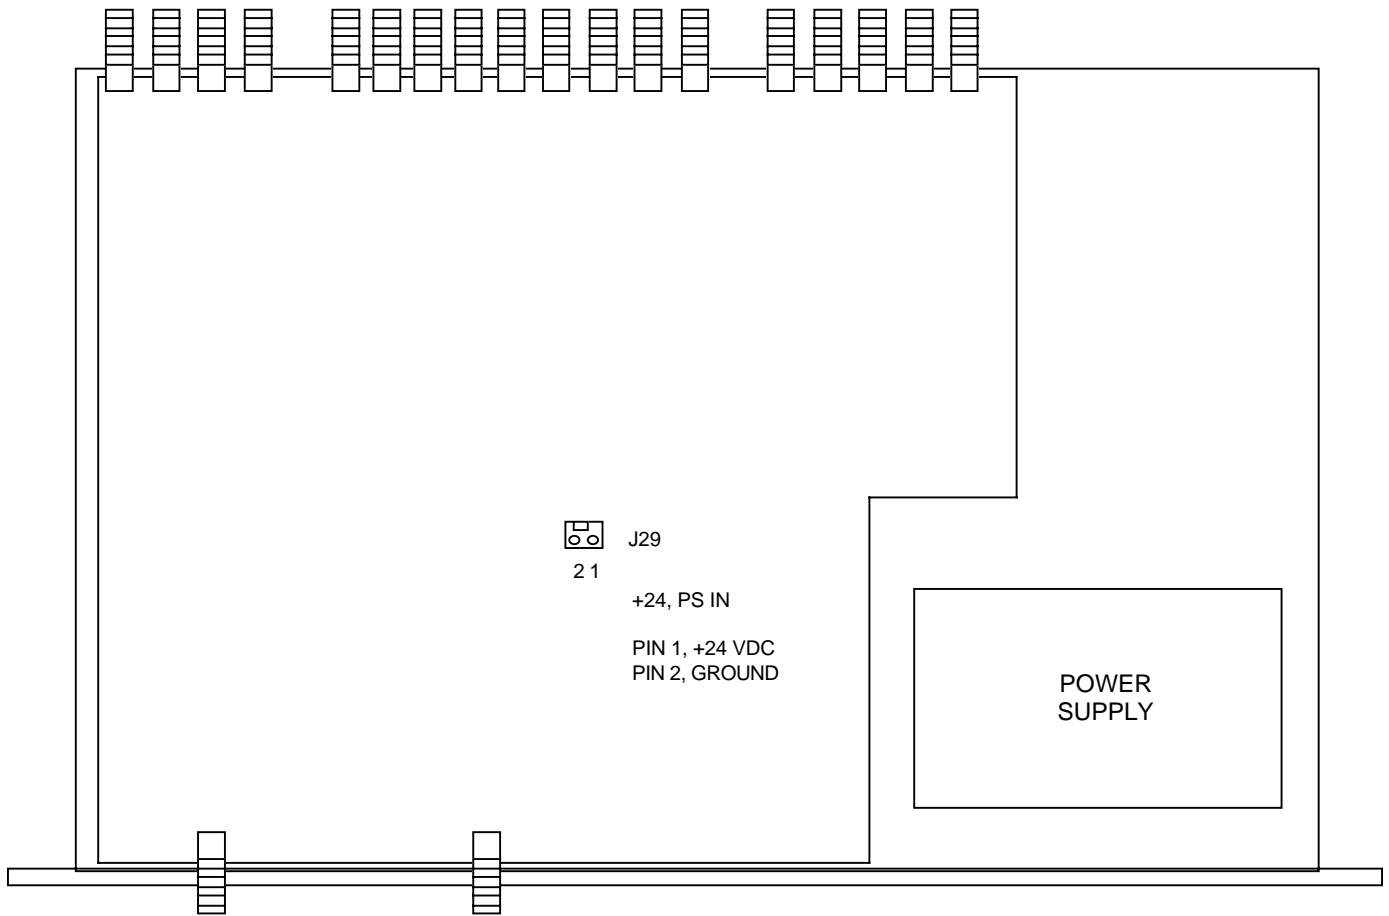


FIGURE 2.0 1584-29S Mechanical Assembly

2.2 Rear Panel Input/Output Connectors

The input and output connectors on the rear panel are shown in Figure 2.1.

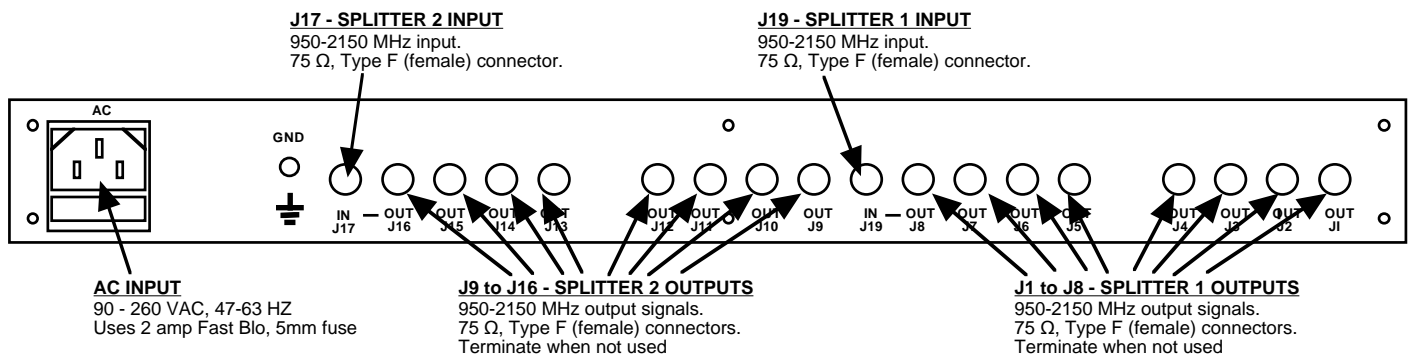


FIGURE 2.1 1584-29S Rear Panel

TABLE 2.1 Connector Options	
Option	RF Connector
STD	Type F, 75Ω
B	BNC, 75Ω
D	BNC, 50Ω

2.3 Front Panel Monitors and Indicators

Figure 2.2 shows the front panel monitors and indicators.

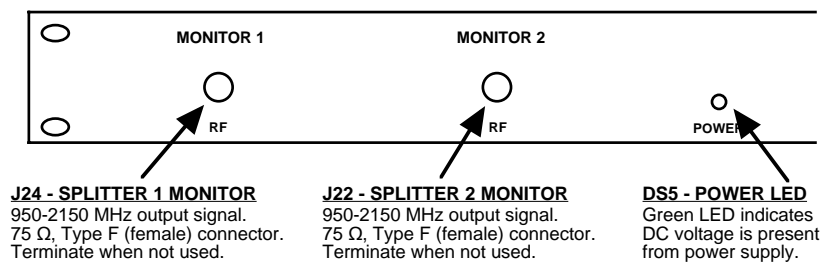


FIGURE 2.2 1584-29S Front Panel

2.4 Operation

1. Connect RF cables to the 1584-29S (Figure 2.1).
2. Connect 90 - 260 VAC, 47 - 63 Hz to AC on the back panel and observe that the AC POWER LED is lit on the front panel (Figure 2.2).
3. Monitor RF signals on the front panel monitors to insure proper signals (Figure 2.2).
4. AC Fuse - The fuse is a 5mm, 2 amp fast blo and is inserted in the far slot in the drawer below the AC input as shown in Figure 2.6. There is a spare fuse in the near slot. If a fuse continues to open, the power supply is most likely defective. Note that the power supply module within the chassis also has a fuse but failure of this fuse indicates the power supply may be defective.

PLEASE NOTE: FOR OPTIMUM PERFORMANCE, THE MONITOR PORT AND SPLITTER PORTS SHOULD BE TERMINATED WITH 75 OHM TYPE F TERMINATIONS WHEN NOT USED.

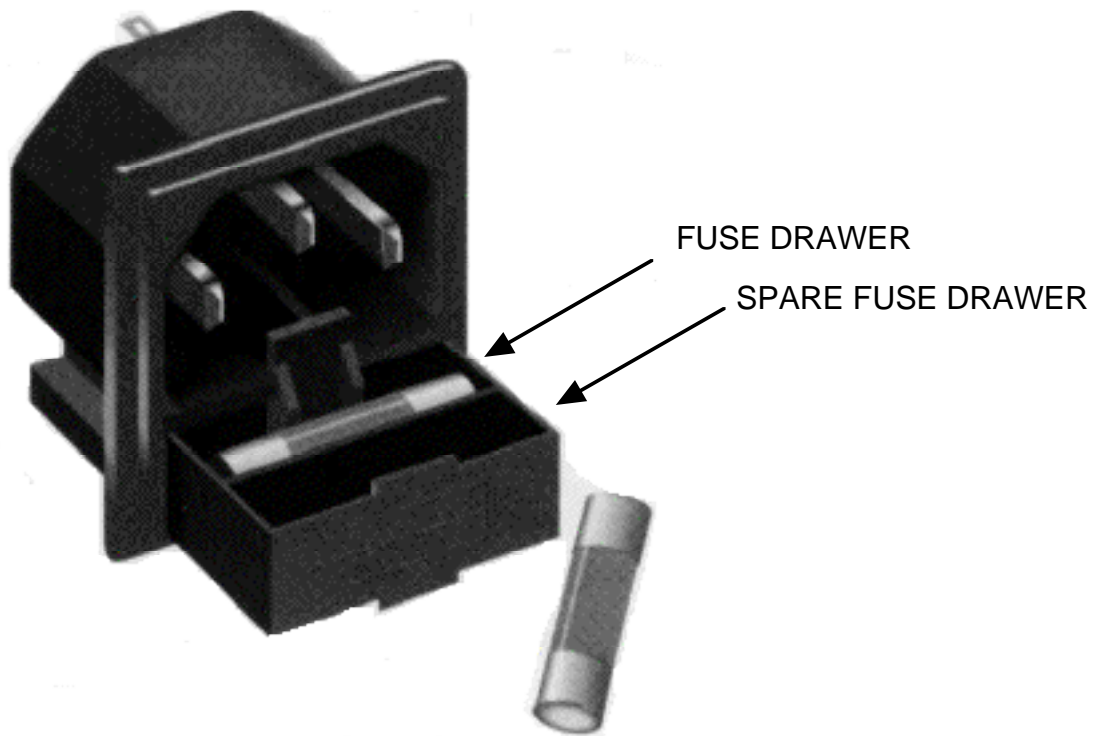


FIGURE 2.6 Fuse and Spare Fuse Locations

**CROSS TECHNOLOGIES, INC.
6170 SHILOH ROAD
ALPHARETTA, GEORGIA 30005**

**(770) 886-8005
FAX (770) 886-7964**

**WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com**