


Instruction Manual


Model 1584-45S RF Splitter

April 2009, Rev. B

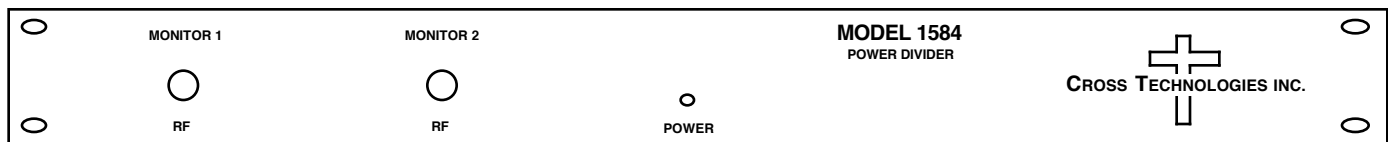

Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., but may be reproduced or duplicated without the prior permission of Cross Technologies, Inc. for purposes of operating the equipment.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.

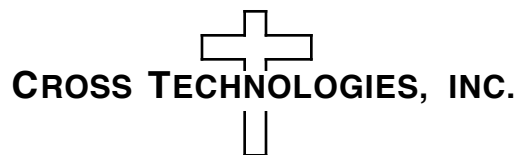

6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

INSTRUCTION MANUAL

MODEL 1584-45S RF Splitter

<u>TABLE OF CONTENTS</u>	<u>PAGE</u>
Warranty	2
1.0 General	3
1.1 Equipment Description	3
1.2 Technical Characteristics	4
2.0 Installation	5
2.1 Mechanical	5
2.2 Rear Panel Input/Output Connectors	6
2.3 Front Panel Monitors and Indicators	6
2.4 Operation	7
2.5 Environmental Use Information	8

WARRANTY - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are no other warranties, express or implied, except as stated herein.



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

MODEL 1584-45S RF Splitter

1.0 General

1.1 Equipment Description

The Model 1584-45S is four, five-way, 0.95 - 2.05 GHz, 0 dB gain splitters in a 1 Rack Unit chassis with a single 115 VAC power supply. Each splitter provides surge protection and excellent RF characteristics. Each splitter has a monitor connector on the front panel and four outputs on the back panel. One 115 VAC input power supply provides +24 VDC voltage for internal amplifiers. A surge suppressor on each splitter input protects against high voltage transients. All splitter outputs are AC coupled so no DC appears on their center conductors. On the front panel, a green LED indicates the presence of power from the +24 VDC power supply.

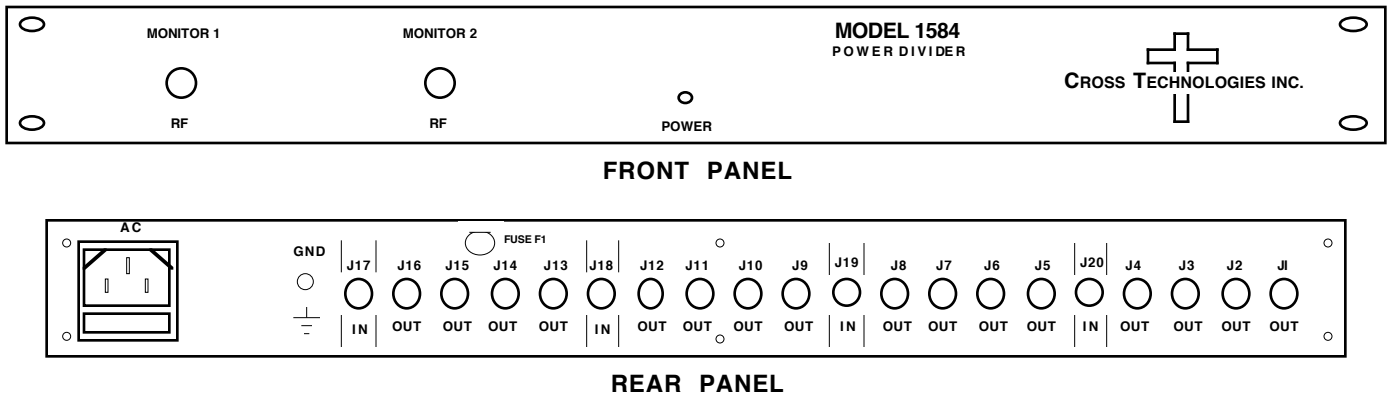


FIGURE 1.1 MODEL 1584-45S Front and Rear Panels

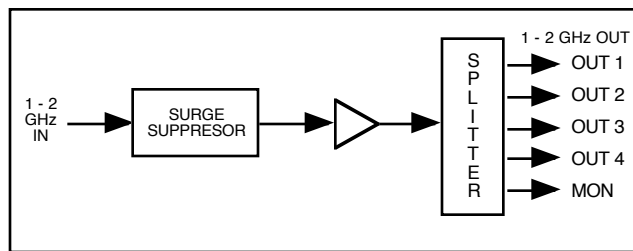


FIGURE 1.2 MODEL 1584-45S Block Diagram (Each Splitter)

1.2 Technical Characteristics

EQUIPMENT SPECIFICATIONS*

Input Characteristics

Impedance	75 Ω
Return Loss	10 dB min, 0.95-2.05 GHz; 14 dB typ, 0.95-1.75 GHz
Input Level	-20 dBm total maximum

Output Characteristics

Impedance	75 Ω
Return Loss	10 dB min, 0.95-2.05 GHz; 14 dB typ, 0.95-1.75 GHz

In-Band Characteristics

Gain	0 dB \pm 1.0 dB
Frequency Response	\pm 1.0 dB, 0.95 - 2.05 GHz; \pm 0.5 dB, any 20 MHz incr
Port to Port Isolation	> 18 dB, min., 20 dB typ.
Coupler to Coupler Isol.	> 35 dB, min., 40 dB typ

Indicators

Power	Green LED
-------	-----------

Other

Surge Suppressor	SiDACTOR
RF connectors	Type F (female) see TABLE 2.1 for other options
Fuse - AC	5mm, 2 amp, fast blo
AC Power	100-240 \pm 10% VAC, 47 -63 Hz, 30 watts max.
Mechanical	19 inch standard chassis 1.75"high X 12"deep

Options

R	Redundant power supplies
Connectors	See TABLE 2.1

*+10°C to +40°C; 2000 meters max elevation; 80% max humidity; Pollution Degree 2;
Specifications subject to change without notice.

2.0 Installation

2.1 Mechanical

The 1584-45S consists of one RF printed circuit board (PCB) housed in a 1 RU (1 3/4 inch high) by 12 inch deep chassis. One +24 VDC power supply provides power for the internal amplifiers and LED. Connectors are type F, female for the RF connections. The 1584-45S can be secured to a rack using the 4 holes on the front panel. Figure 2.0 shows how the 1584-45S is assembled. J29 connects the DC voltage from the power supply to the PCB as shown.

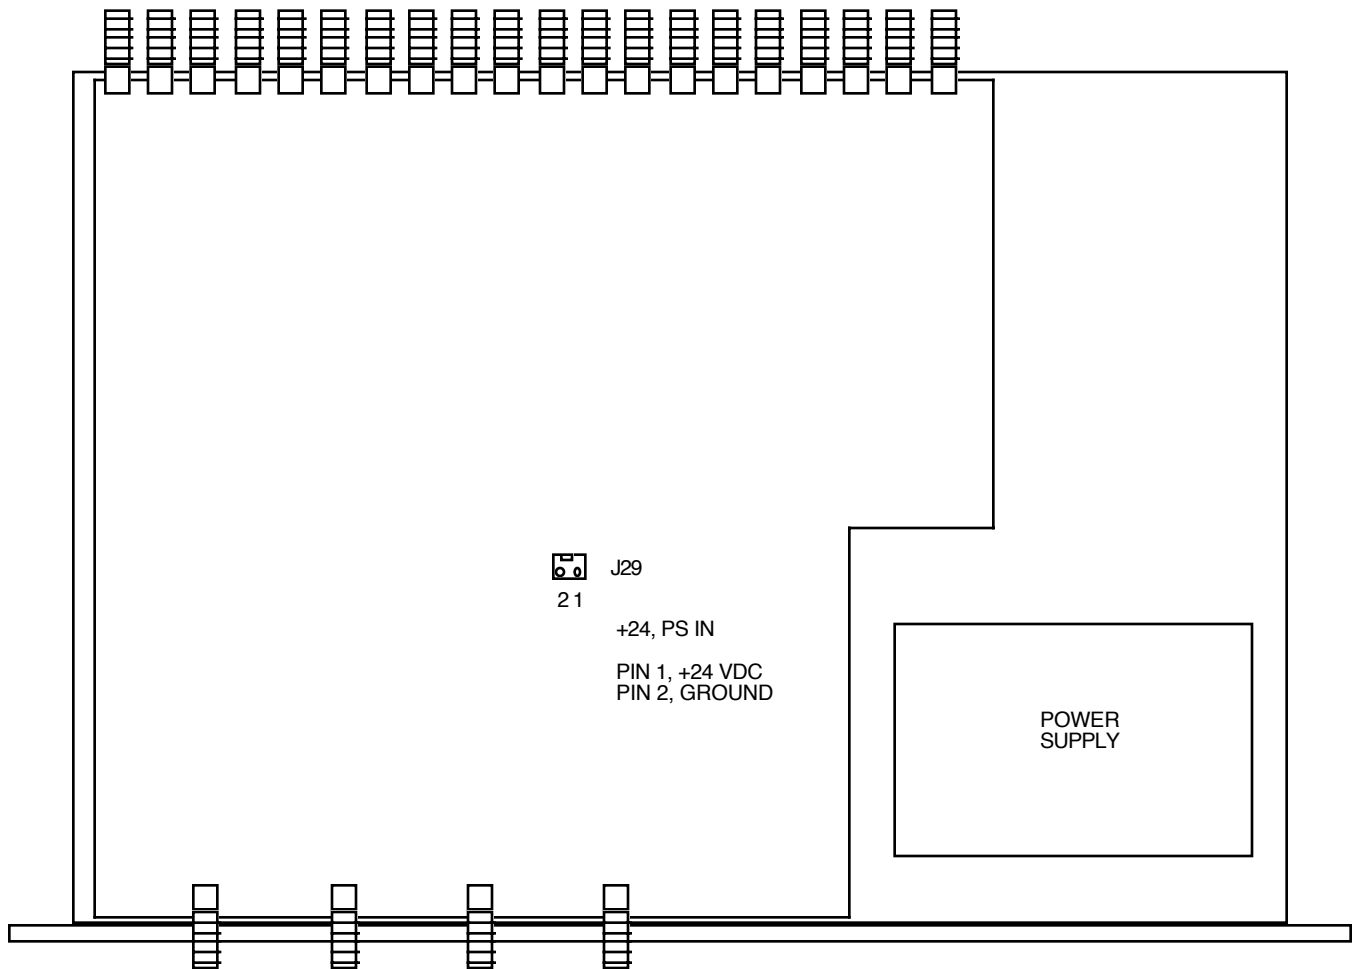


FIGURE 2.0 1584-45S Mechanical Assembly

2.2 Rear Panel Input/Output Connectors

The input and output connectors on the rear panel are shown in Figure 2.1.

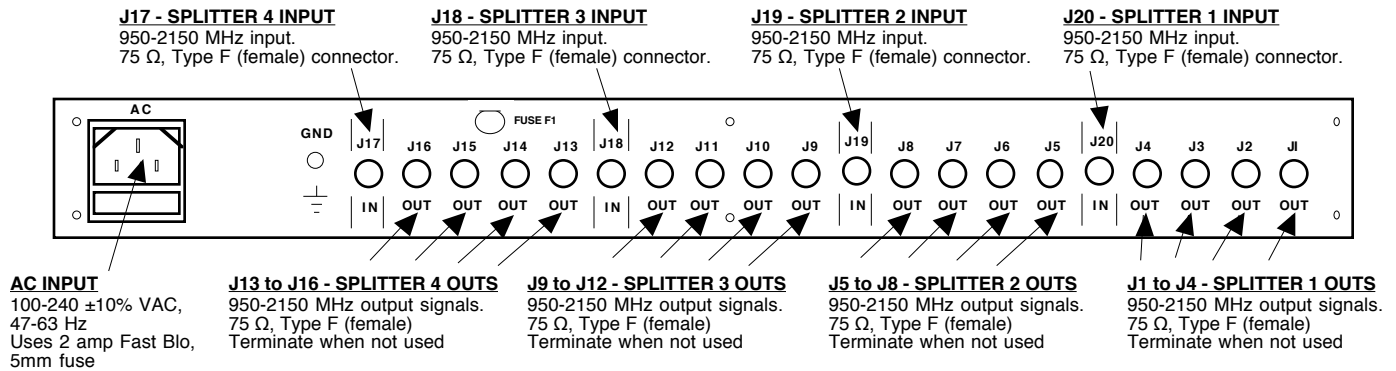


FIGURE 2.1 1584-45S Rear Panel

Option	RF Connector
STD	Type F, 75Ω
B	BNC, 75Ω
D	BNC, 50Ω

2.3 Front Panel Monitors and Indicators

Figure 2.2 shows the front panel monitors and indicators.

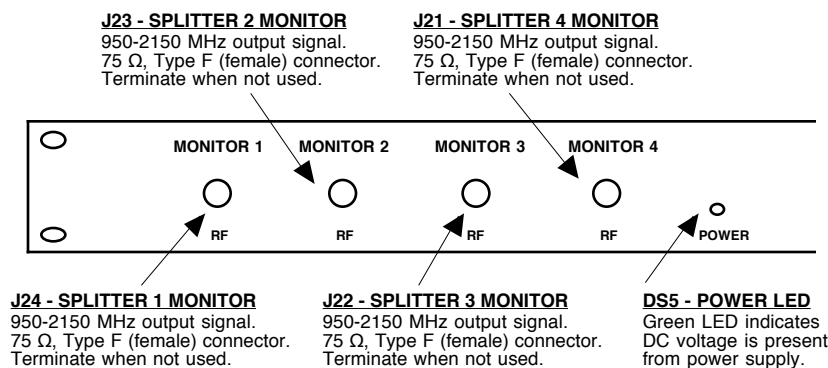


FIGURE 2.2 1584-45S Front Panel

2.4 Operation

1. Connect RF cables to the 1584-45S (Figure 2.1).
2. Connect 100-240 \pm 10% VAC, 47 - 63 Hz to AC on the back panel and observe that the AC POWER LED is lit on the front panel (Figure 2.2).
3. Monitor RF signals on the front panel monitors to insure proper signals (Figure 2.2).
4. AC Fuse - The fuse is a 5mm, 2 amp fast blo and is inserted in the far slot in the drawer below the AC input as shown in Figure 2.6. There is a spare fuse in the rear slot. If a fuse continues to open, the power supply is most likely defective. Note that the power supply module within the chassis also has a fuse but failure of this fuse indicates the power supply may be defective.

PLEASE NOTE: FOR OPTIMUM PERFORMANCE, THE MONITOR PORT AND SPLITTER PORTS SHOULD BE TERMINATED WITH 75 OHM TYPE F TERMINATIONS WHEN NOT USED.

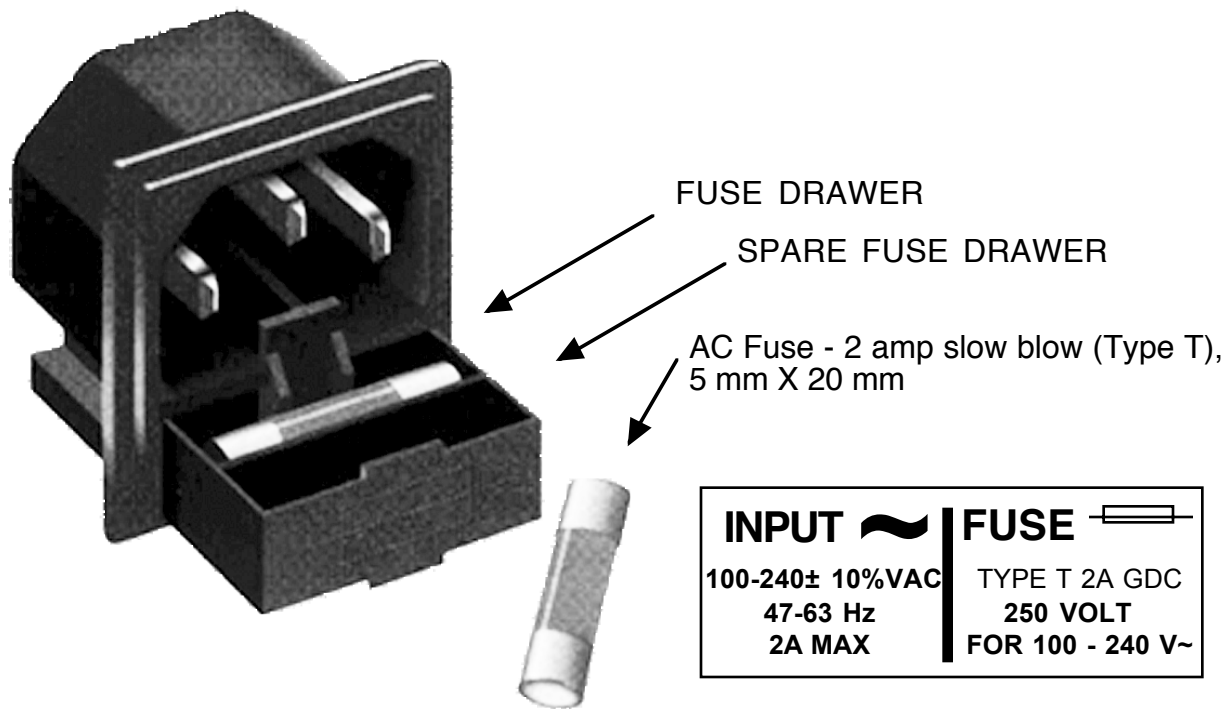


FIGURE 2.6 Fuse and Spare Fuse Locations

2.5 Environmental Use Information

- A. **Rack-Mounting** - To mount this equipment in a rack, please refer to the installation instructions located in the user manual furnished by the manufacturer of your equipment rack.
- B. **Mechanical loading** - Mounting of equipment in a rack should be such that a hazardous condition does not exist due to uneven weight distribution.
- C. **Elevated operating ambient temperature** - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack may be greater than room ambient temperature. Therefore, consideration should be given to Tmra.
- D. **Reduced air flow** - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. Additional space between unit may be required.
- E. **Circuit Overloading** - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits could have on over current protection and supply wiring. Appropriate consideration of equipment name plate rating should be used, when addressing this concern.
- F. **Reliable Earthing** - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connection to the Branch (use of power strips).
- G. **Top Cover** - There are no serviceable parts inside the product so, the Top Cover should not be removed. If the Top Cover is removed the ground strap and associated screw **MUST BE REINSTALLED** prior to Top Cover screw replacement. **FAILURE TO DO** this may cause **INGRESS** and/or **EGRESS** emission problems.



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

2009 Printed in USA