

# Instruction Manual

# Model 4116-T300 Ka-Band Translator Weather Resistant Unit

August 2011, Rev. C



Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., but may be reproduced or duplicated without the prior permission of Cross Technologies, Inc. for purposes of operating the equipment.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.



6170 Shiloh Road  
Alpharetta, Georgia 30005  
(770) 886-8005 • FAX (770) 886-7964 • Toll Free 888-900-5588

WEB [www.crosstechnologies.com](http://www.crosstechnologies.com)  
E-MAIL [info@crosstechnologies.com](mailto:info@crosstechnologies.com)

# INSTRUCTION MANUAL

## MODEL 4116-T300 Ka-Band Translator (Weather Resistant\* Enclosure)

<u>TABLE OF CONTENTS</u>	<u>PAGE</u>
<b>Warranty</b>	<b>2</b>
<b>1.0 General</b>	<b>3</b>
1.1 Equipment Description	<b>3</b>
1.2 Technical Characteristics	<b>4</b>
<b>2.0 Installation</b>	<b>6</b>
2.1 Message Protocol	<b>6</b>
2.2 M&C Commands	<b>7</b>
2.3 M&C Queries	<b>9</b>
2.4 Ethernet Interface Installation	<b>12</b>
2.4.1 Methods of Connection	<b>12</b>
2.4.2 Ethernet Configuration	<b>12</b>
2.4.3 Webpage M&C	<b>13</b>
2.4.4 SNMP Configuration	<b>14</b>
2.5 Translator Outline Drawings	<b>17</b>
2.6 Physical Interface	<b>18</b>
2.7 Installation/Operation	<b>19</b>

**WARRANTY** - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are not other warranties, express or implied, except as stated herein.



6170 Shiloh Road

Alpharetta, Georgia 30005

(770) 886-8005 • FAX (770) 886-7964 • Toll Free 888-900-5588

WEB [www.crosstechnologies.com](http://www.crosstechnologies.com) • E-MAIL [info@crosstechnologies.com](mailto:info@crosstechnologies.com)



# MODEL 4116-T300 Ka-Band Translator (Weather Resistant\* Enclosure)

## 1.0 General

### 1.1 Equipment Description

The 4116-T300 Ka-band Translator converts 27.5 - 31.0 GHz to 17.7 - 21.2 GHz in four selectable fixed bands and to 2.5 - 6.0 GHz for monitoring purposes. LEDs provide indication of DC Power, and PLL Alarms. The maximum gain is +20 dB. Connectors are 2.92mm for the RF In and RF Monitor, Super SMA for the RF Out, Type N for the C-band monitor, and SMA (all female) for the external reference input and output. Gain, band select, and internal 10 MHz frequency are controlled by the M&C (Ethernet and/or Status/Control) Connectors. In AUTO, the 10 MHz reference stays in external if the external level is in the +2 to +8 dBm range. The 4116-T300 is powered by a 100-240  $\pm$ 10% VAC power supply and mounted in a 8" Wide X 6" High X 16" Deep, Weather Resistant\* enclosure.

**NOTE:** \*Weather Resistant enclosures are designed to be water resistant for installation in an outdoor enclosure/antenna hut OR mounted outdoors on an antenna assembly at their specified temperature ranges. They are designed to be located "out in the elements" (water, sleet, snow, etc.) but they are *not* designed to be "submerged under" water. If an extended temperature range is required, there is an **Extended Temperature** option (**Option W21**; -30°C to +60°C) available at an additional cost. Contact Cross for quote.

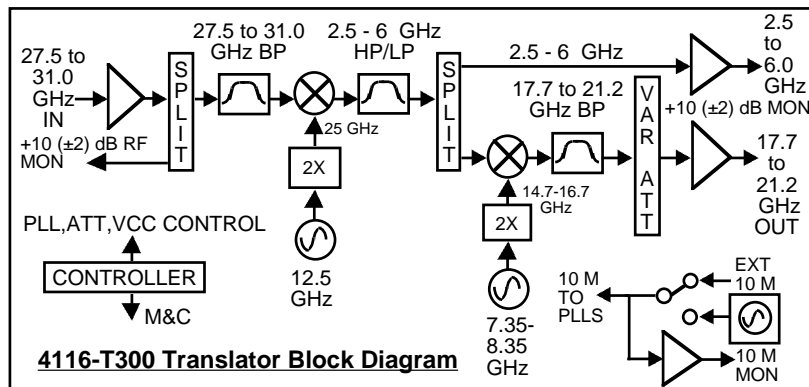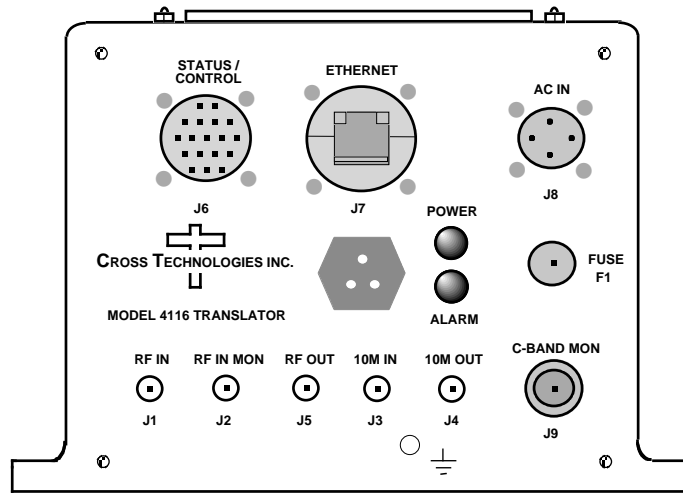

## 1.2 Technical Characteristics

**TABLE 1.0 4116-T300 Ka-Band Translator Specifications\*\***

### Input Characteristics

Impedance/Return Loss	50Ω /14 dB
Frequency (GHz)	See Band Chart Below
Noise Figure, max.	20 dB max. gain
Input Level	-40 to -15 dBm
Input 1dB Compression	-5 dBm

### Output Characteristics

Impedance/Return Loss	50Ω/14 dB, Mute & Unmute
Frequency (GHz)	See Band Chart Below
Output Level Range	-15 to 0 dBm
Output 1dB Compression	+10 dBm, max. gain
Mute	>60 dB @ 0 dBm output

### Frequency (GHz) Band Chart

Band	Input (GHz)	Output (GHz)	Translation (GHz)
1	27.5 - 28.5	17.7 - 18.7	9.800 (8.8-10.3)
2	28.0 - 29.0	18.3 - 19.3	9.700 (8.7-10.3)
3	29.0 - 30.0	19.2 - 20.2	9.800 (8.8-10.3)
4	30.0 - 31.0	20.2 - 21.2	9.800 (8.8-10.3)
5	27.5 - 28.5	18.3 - 19.3	9.200 (8.3-10.2)
6	27.5 - 28.5	19.2 - 20.2	8.300 (8.3-9.3)
7	28.0 - 29.0	17.7 - 18.7	10.300 (9.3-10.3)
8	28.0 - 29.0	19.2 - 20.2	8.800 (8.3-9.8)
9	29.0 - 30.0	18.7 - 19.7	10.300
10	29.0 - 30.0	19.0 - 20.0	10.000 (9.7-10.3)
11	30.0 - 31.0	20.0 - 21.0	10.000 (9.8-10.3)

### Channel Characteristics

Gain at $F_c$	+20 ±3 dB, (+20 to -10 dB variable in 1 dB steps)
Input to output isolation	> 60 dB, min. (at max. gain and 0 dBm out)
Spurious, Inband	SIG. REL. <-45 dBC, -15 to 0 dBm out; SIG. IND. <-50 dBm; $f_c \pm 0.5$ GHz
Spurious, Out of band	<-50 dBm; signal independent; $f_c \pm 2$ GHz
Spurious LO	<-50 dBm, measured at the input; <-25 dBm, measured at the output
Intermodulation	<-50 dBC for two carriers each at 4 MHz spacing, each at -7 dBm out
Frequency Response	±2 dB, over RF band; ± 0.5 dB, 40 MHz BW
Frequency Sense	Non-inverting

### LO Characteristics

LO Frequency	Band Specific, 8.3 to 10.3 GHz translation range, 5 MHz steps
Frequency Accuracy	± 0.05 ppm max. over temp internal reference; ext. ref. input
10 MHz Level	+2 to +8 dBm in; Monitor Output = input level ±1 dB, 50 ohms

Phase Noise @ F (Hz)>	100	1K	10K	100K	1M
dBc/Hz	65	75	77	93	105

*Continued on page 5...*

*Continued from page 4...*

**Controls, Indicators**

Gain, Band, 10M Freq.	Gain, band select, and internal 10 MHz frequency via Ethernet M&C or Status/Control connector.
PLL Alarm	Red LED, External contact closure
Power	Green LED

**Other**

RF In, RF Mon Con.	2.92mm (40 GHz) female, 50Ω
RF Out Connector	Super SMA (27GHz) female, 50Ω
M&C Connector(s)	Status/Control Connector - MS3112F-18P Weatherized Connector; Ethernet Connector - Standard RJ45 Weatherized Connector
C-Band Connector	Type N (female), 50Ω
10 MHz Connectors	SMA (female), 50Ω
Size	8" Wide X 6 "High X 16" Deep, Weather Resistant* Enclosure
Power	100-240 ±10% VAC, 47 - 63 Hz, 30 watts max./ FCI Clipper Series CL1M1102 Connector

---

\*\*+0 to +50 degrees C; Specifications subject to change without notice

## 2.0 Installation

The 4116-T300 Ka-Band Translator consists of a 8” Wide X 6” High X 16” Deep Weather Resistant\* enclosure. A switching,  $\pm 12$ , +24, +5 VDC power supply provides power for the internal assemblies. The 4116-T300 can be secured to a mounting plate using the 4 holes on the bottom of the front and rear panels. (See Figure 2.5 for mounting dimensions.)

**Figure 2 - 4116-T300 Ka-Band Translator Front Panel**



### 2.0.1 Connection to AC Input Power

The 4117-14 is furnished with a pre-assembled AC power input cable as described below.

4116-T300 Mating Input Connector	
FCI Clipper Series, CL1M1102 and crimp pins	
Pin	Input Connector Pin Description
1	100-240 $\pm 10\%$ VAC, 47-63 Hz, 20 watts max.
2	Neutral
3	Ground

### 2.1 Message Protocol

The serial format for the RS232/RS422/RS485 port is 9600 baud, 8 data bits, no parity, and 1 stop bit. All messages consist of ASCII printable characters so standard terminals and terminal emulator programs may be used to control and monitor the unit. All messages begin with the open bracket character “{” (ASCII 0x7B) and end with the close bracket character “}” (ASCII 0x7D). Messages consisting of commands to set or change operating parameters and modes of the unit begin with “C” (ascii 0x43) followed by a command specific character. Messages consisting of queries to report operating parameters and modes begin with “S” (ASCII 0x53) followed by a parameter specific character.

## 2.2 M&C Commands

The following tables summarize the commands and status queries applicable to the 4116-T300.

\* **PLEASE NOTE:** The two character {aa} prefix, shown in the following table, is present **ONLY** when RS485 is selected.

**Table 2.0 Model 4116-T300 M&C Commands**

Table 2.0: Model 4116-T300 M&C Commands		
Command	Syntax	Description
Set Frequency Band	{aaCBx}	x = 1 to select band 1: in = (27.5 to 28.5 GHz) out = (17.7 to 18.7 GHz)
		x = 2 to select band 2: in = (28.0 to 29.0 GHz) out = (18.3 to 19.3 GHz)
		x = 3 to select band 3: in = (29.0 to 30.0 GHz) out = (19.2 to 20.2 GHz)
		x = 4 to select band 4: in = (30.0 to 31.0 GHz) out = (20.2 to 21.2 MHz)
		x = 5 to select band 5: in = (27.5 to 28.5 GHz) Out = (18.3 to 19.3 GHz)
		x = 6 to select band 6: in = (27.5 to 28.5 GHz) Out = (19.2 to 20.2 GHz)
		x = 7 to select band 7: in = (28.0 to 29.0 GHz) Out = (17.7 to 18.7 GHz)
		x = 8 to select band 8: in = (28.0 to 29.0 GHz) Out = (19.2 to 20.2 GHz)
		x = 9 to select band 9: in = (29.0 to 30.0 GHz) Out = (17.7 to 18.7 GHz)
		x = 10 to select band 10: in = (29.0 to 30.0 GHz) Out = (18.3 to 19.3 GHz)
		x = 11 to select band 11: in = (30.0 to 31.0 GHz) Out = (19.2 to 20.2 GHz)
Set Frequency Offset	{aaCxx yyyy}	where:
		xx = Band (Range 1 to 11)
		yyyyy = Translation Frequency Offset
		if Band 1 is selected, Range: -500 to +1000 in 5 MHz steps
		if Band 2 is selected, Range: -600 to +1000 in 5 MHz steps
		if Band 3 is selected, Range: -500 to +1000 in 5 MHz steps
		if Band 4 is selected, Range: -500 to +1000 in 5 MHz steps
		if Band 5 is selected, Range: -1000 to +900 in 5 MHz steps
		if Band 6 is selected, Range: -1000 to 0 in 5 MHz steps
		if Band 7 is selected, Range: 0 to +1000 in 5 MHz steps
		if Band 8 is selected, Range: -1000 to +500 in 5 MHz steps
if Band 9 is selected, Range: 0 to 0 (not tunable)		
if Band 10 is selected, Range: -300 to 300 in 5 MHz steps		
if Band 11 is selected, Range: -300 to +200 in 5 MHz steps		

continued on page 8...

**M&C Commands (continued)**

<b>Table 2.0: Model 4116-T300 M&amp;C Commands</b>		
<b>Command</b>	<b>Syntax</b>	<b>Description</b>
Set Gain	{aaCGxxxx}	where:
		xxxx = 4 characters
		Range: -100 to +200 (-10.0 to +20.0 in 1 dB steps)
Set Serial Interface	{aaCIx}	where:
		x = 0 to select RS232
		x = 1 to select RS422
		x = 2 to select RS485
Set Mute	{aaCMx}	where
		x = 1 to mute the output
		x = 0 to unmute the output
Set RS485 address	{aaCRxx}	where:
		xx = 2 characters
		Range: 00 to 31
Set Int. 10 MHz reference offset	{aaCOxxxxx}	where:
		xxxxx = 5 characters
		Range: +2000 to -2000
Set 10 MHz reference mode	{aaCEx}	where:
		x = 1 to select Internal 10 MHz reference
		x = 2 to select External 10 MHz reference
		x = 3 to select Auto 10 MHz reference

## 2.3 M&C Queries

Table 2.1: Model 4116-T300 M&C Queries		
Queries	Syntax	Description
Frequency Band	{aaSB}	Returns {aaSBx} where:
		x = 1 if band 1 is selected: in = (27.5 to 28.5 GHz)
		x = 2 if band 2 is selected: in = (28.0 to 29.0 GHz)
		x = 3 if band 3 is selected: in = (29.0 to 30.0 GHz)
		x = 4 if band 4 is selected: in = (30.0 to 31.0 GHz)
		x = 5 if band 5 is selected: in = (27.5 to 28.5 GHz)
		x = 6 if band 6 is selected: in = (27.5 to 28.5 GHz)
		x = 7 if band 7 is selected: in = (28.0 to 29.0 GHz)
		x = 8 if band 8 is selected: in = (28.0 to 29.0 GHz)
		x = 9 if band 9 is selected: in = (29.0 to 30.0 GHz)
		x = 10 if band 10 is selected: in = (28.0 to 29.0 GHz)
		x = 11 if band 11 is selected: in = (30.0 to 31.0 GHz)
Gain	{aaSG}	Returns {aaSGxxxx} where:
		xxxx = 4 characters
		Range: (-100 to +200 in 1 dB steps)
		Example: {aaSG-090} indicates that the current gain setting is -9.0 dB
10 MHz reference	{aaSE}	Returns {aaSEx} where:
		x = 1 if Internal 10 MHz reference is selected
		x = 2 if External 10 MHz reference is selected
		x = 3 if Auto 10 MHz reference is selected

continued on page 10...

**M&C Queries (continued)**

Queries	Syntax	Description
Frequency Offset	{aaSxx}	Returns {aaSxxyyyy} where:
		xx = Band (Range 1 to 11)
		yyyyy = Translation Frequency Offset
		if Band 1 is selected, Range: -500 to +1000 in 5 MHz steps
		if Band 2 is selected, Range: -600 to +1000 in 5 MHz steps
		if Band 3 is selected, Range: -500 to +1000 in 5 MHz steps
		if Band 4 is selected, Range: -500 to +1000 in 5 MHz steps
		if Band 5 is selected, Range: -1000 to +900 in 5 MHz steps
		if Band 6 is selected, Range: -1000 to 0 in 5 MHz steps
		if Band 7 is selected, Range: 0 to +1000 in 5 MHz steps
		if Band 8 is selected, Range: -1000 to +500 in 5 MHz steps
		if Band 9 is selected, Range: 0 to 0 (not tunable)
		if Band 10 is selected, Range: -300 to 300 in 5 MHz steps
		if Band 11 is selected, Range: -300 to +200 in 5 MHz steps
Serial Interface	{aaSI}	Returns {aaSIx} where:
		x = 0 if RS232 is selected
		x = 1 if RS422 is selected
		x = 2 if RS485 is selected
		if Band 5 is selected, Range: 00000 to -0500 in 5 MHz steps
RS485 address	{aaSR}	Returns {aaSRxx} where:
		xx = 2 characters
		Range: 00 to 31

**continued on page 11...**

**M&C Queries (continued)**

Queries	Syntax	Description
Mute Status	{aaSM}	Returns {aaSMx} where:
		x = 0 if mute is off
		x = 1 if mute is on
Int. 10 MHz reference offset	{aaSO}	Returns {aaSOxxxxx} where:
		xxxxx = 5 characters
		Range: +2000 to -2000
Unit Status	{aaSA}	Returns {aaSAxy} where:
		x = 0 if no summary alarm, x = 1 if summary alarm
		y = 0 if unit is using internal 10 MHz ref, y = 1 if unit is using external reference
Internal Temperature	{aaST}	Returns {aaSTxxx} where:
		xxx = 3 characters
		Range (-99 to +99) degrees Celsius
Model and firmware revision	{aaSV}	returns {aaSVxxxxxxxxxyyy} where:
		xxxxxxxx = unit model number
		yyyy = unit firmware rev.

## **2.4 ETHERNET Interface Installation and Operation**

The 4116-T300 Ka-Band Translator is equipped with a 10/100 Base-T compatible Ethernet interface for control and monitoring of its operating parameters. An HTML script interface allows the user to monitor and control the converter using a standard web browser. SNMP (Simple Network Management Protocol) is also supported. Contact Cross Technologies for the SNMP MIB file.

### **2.4.1 Methods of Connection**

#### **Directly Connected to a PC:**

For control from a local PC, attach the 4116-T300's Ethernet port to the Ethernet network connector on the PC using a crossover RJ-45 cable.

#### **LAN Connection**


For LAN connections, attach the 4116-T300's Ethernet port to the LAN using a normal RJ-45 cable. Use any PC on the LAN to connect to the 4116-T300.

### **2.4.2 Ethernet Configuration**

Each 4116-T300 must be configured with an appropriate IP address, Netmask, and Gateway assigned by your network manager. The 4116-T300 is set at the factory to the static address 192.168.123.2. The device server in the 4116-T300 has a built in HTTP based configuration manager that is used to configure network settings. To access the configuration manager open a web browser and enter the IP address of the 4116-T300 in the browser's address field. The window shown in Figure 2-A will appear. As delivered, there is no password set. Choose your user name and password here or leave those fields blank and click OK to proceed to the configuration manager webpage.



**Figure 2-A: Password Screen**

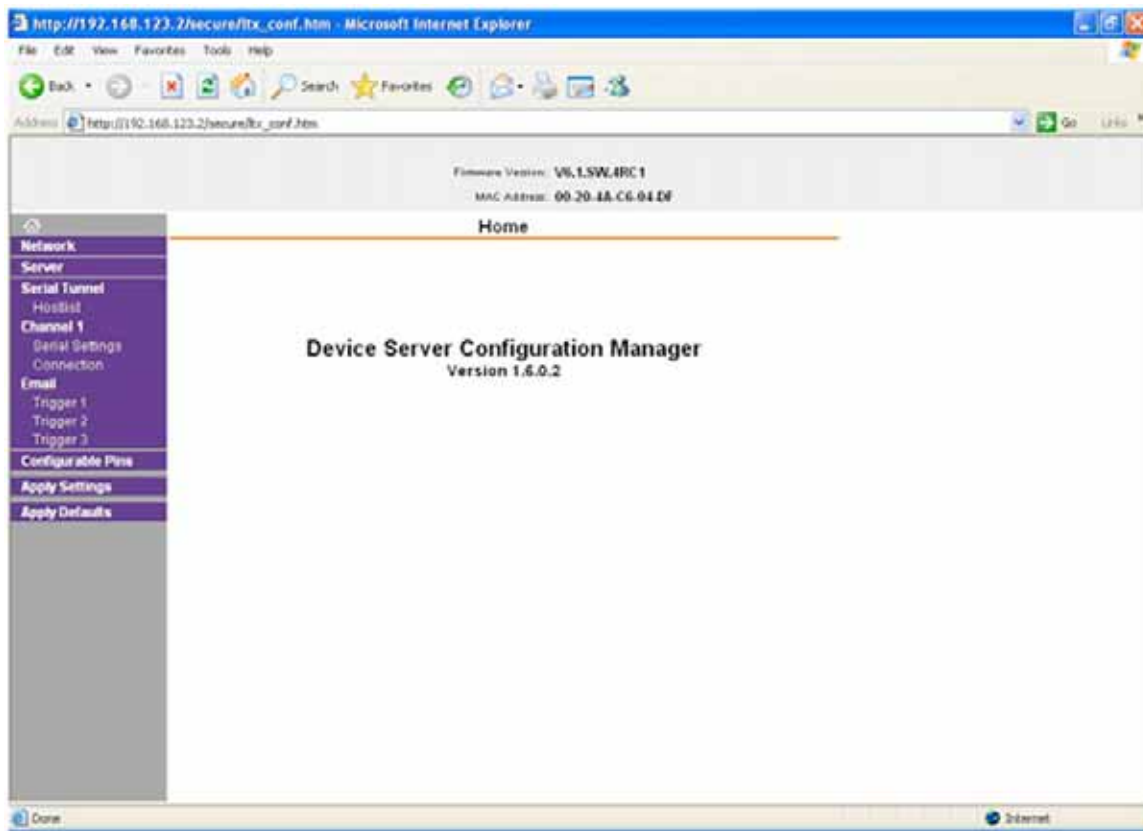

**Figure 2-B: Configuration Manager Screen**

In the left frame of the configuration manager click on Network to display the Network Settings screen. Enter the IP address, Subnet mask, and Gateway address with delimiter dots (example: 192.168.192.47).

### **2.4.3 Webpage M & C**

Enter the following address in a web browser to access the M&C webpage:

<http://<ip address of 41xx>/serial/0/setup.htm> where <ip address> is the IP address of the unit.

Figure 2-C (page 14) shows the product setup web page from a model 4116-T300 frequency converter.

## Cross Technologies Product Setup

Model: 4116-T300 Desc: Ka-Band Translator Rev: 4.00

Frequency Band					
	Band	Input (GHz)	Output (GHz)	Translation (GHz)	
<input checked="" type="radio"/>	1	27.5-28.5	17.7-18.7	9.800	(8.8-10.3)
<input type="radio"/>	2	28.0-29.0	18.3-19.3	9.700	(8.7-10.3)
<input type="radio"/>	3	29.0-30.0	19.2-20.2	9.800	(8.8-10.3)
<input type="radio"/>	4	30.0-31.0	20.2-21.2	9.800	(8.8-10.3)
<input type="radio"/>	5	27.5-28.5	18.3-19.3	9.200	(8.3-10.2)
<input type="radio"/>	6	27.5-28.5	19.2-20.2	8.300	(8.3-9.3)
<input type="radio"/>	7	28.0-29.0	17.7-18.7	10.300	(9.3-10.3)
<input type="radio"/>	8	28.0-29.0	19.2-20.2	8.800	(8.3-9.8)
<input type="radio"/>	9	29.0-30.0	17.7-18.7	10.300	
<input type="radio"/>	10	29.0-30.0	18.3-19.3	10.000	(9.7-10.3)
<input type="radio"/>	11	30.0-31.0	19.2-20.2	10.000	(9.8-10.3)

**NOTE:**  
Translation is computed as input minus output and is expressed in GHz. Its value may be changed within the given limits to the nearest 0.005 GHz (i.e., to the nearest 5 MHz).

**10 Mhz Reference**

Source:  Int  Ext  Auto

Offset:  (-2000 to +2000)

Mute:  Off  On

Gain:  (-10 to +20 dB in 1 dB steps)

**Other Info**

Alarm Status	Current Ref Source	Temperature
OFF	INT	+29 °C


Submit Changes Refresh Data Reset Form to Default Values

**Figure 2-C: Model 4116-T300 Product Setup Web Page**

### 2.4.4 SNMP Configuration

Setting of SNMP parameters such as Community Write and Community Read strings requires a *Telnet*<sup>®</sup> connection to port 9999. The following instructions explain how to establish such a *Telnet*<sup>®</sup> connection using Windows XP's Hyper Terminal utility.

Start the Hyper Terminal application and select "New Connection" from the "File" drop down menu. The next screen is a "Connect To" dialog box. Select TCP/IP (Winsock) from the "Connect" drop down menu. Enter the IP address of the 4116-T300 in the "Host address:" field and 9999 in the "Port number" field. Figure 2-E shows an example of the Hyper Terminal settings required to access the SNMP configuration menu.

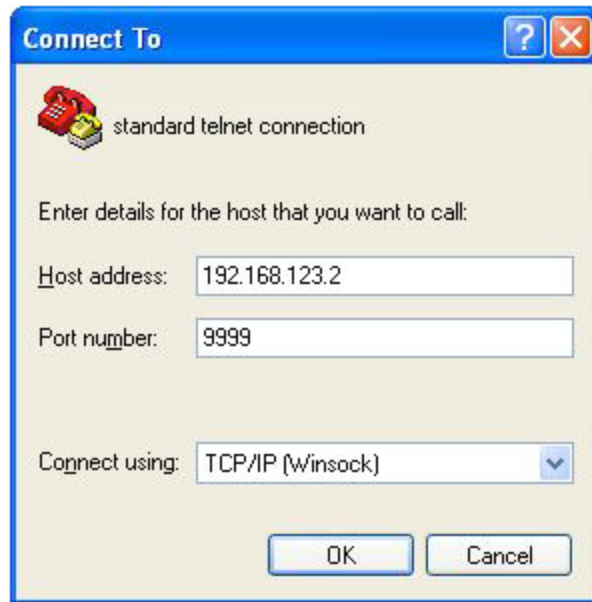

**Figure 2-E: Telnet® Settings in Hyper Terminal**

Once the *Telnet*® connection is established you will be prompted to “Press Enter for Setup Mode”. Press enter and a menu of device server configuration options will appear (see Figure 2-F). Select menu item 3, “SNMP configuration.” You will be prompted to enter SNMP community read and write strings. After setting your desired community strings you will be prompted to “Enter IP addresses for SNMP traps.” You must enter at least one and up to four IP addresses of SNMP managers that will access the unit. This is required even though SNMP traps are not implemented. The unit will not process SNMP SET and GET requests from an SNMP manager unless the IP address associated with that manager is entered in the device server.

**Figure 2-F: Device Server Configuration Menu**

```
xport_telnet_setup - HyperTerminal
File Edit View Call Transfer Help
Enhanced Password is disabled

***** Channel 1 *****
Baudrate 38400, I/F Mode 4C, Flow 00
CPU performance : Standard
Web RAM size 01000


***** SNMP Configuration *****
SNMP community name for read: public
SNMP community name for write: public
Trap IP addresses:
1: 192.168.123.1
2: 0.0.0.0
3: 0.0.0.0

Change Setup:
0 Server configuration
1 Channel 1 configuration
3 SNMP configuration
6 Security
7 factory defaults
8 exit without save
9 save and exit

Your choice ?

Connected 0:00:20 ANSIW TCP/IP SCROLL CAPS NUM Capture Print
```

**Figure 2.5** Shows front panel input and output connections, top view and baseplate mounting dimensions.

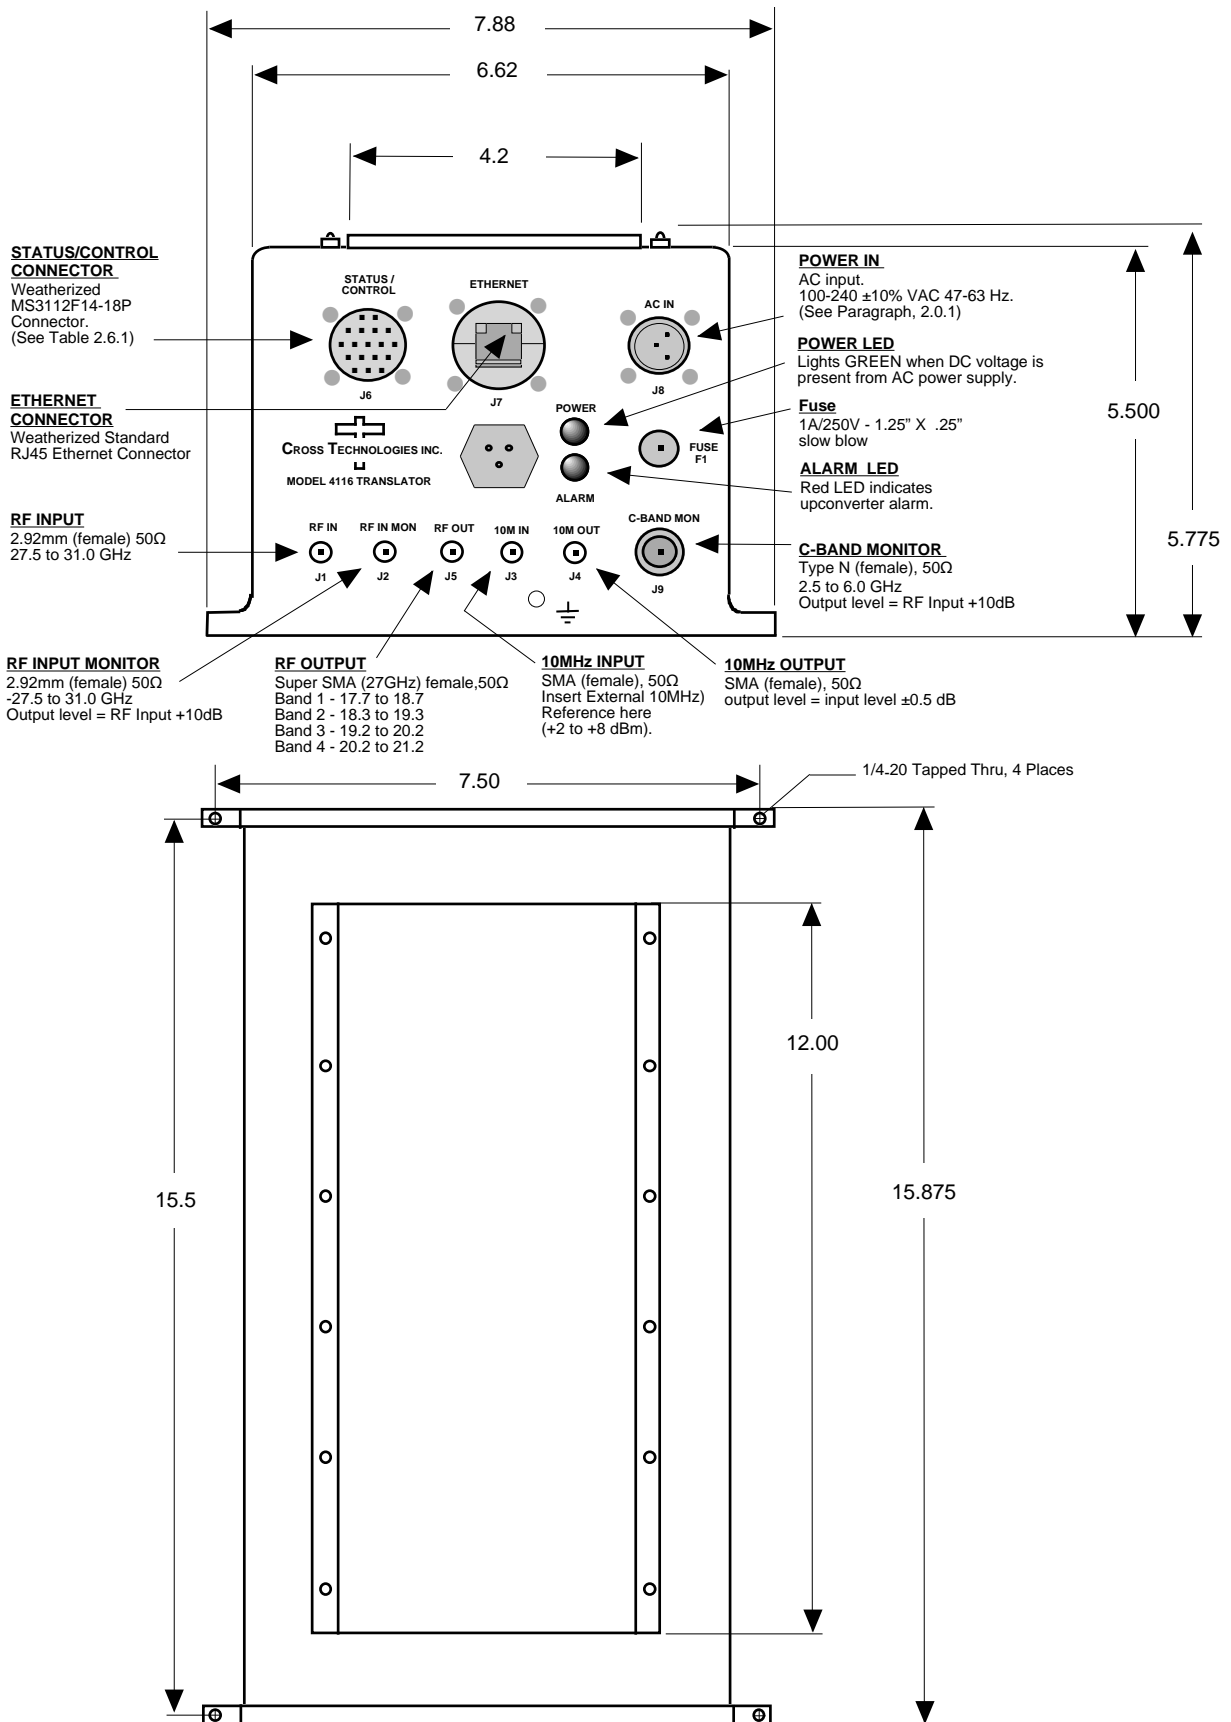

## **2.6 Physical Interface**

All 4115 and 4116 units provide a RS232/RS422/RS485 interface port and a 10/100 Base-T Ethernet port. Both ports are available when the unit is installed and powered up. Commands may be sent to either port at any time and they will be processed in the order that they are received. The RS232/RS422/RS485 signals connect via a multipurpose MS3112 18 pin connector as shown in Figure 2.5. The Ethernet signals connect via a standard RJ45 connector.

**Table 2.6.1: Monitor and Control Connector**

<b>Monitor and Control Connector Pinout</b>	
<b>Mating connector part number MS3116F14-18P</b>	
<b>Pin</b>	<b>Signal Description</b>
A	Chassis Ground
N	Summary Alarm Normally Closed
P	Summary Alarm Common
R	Summary Alarm Normally Open
E	RS422/RS485 Data Out-
F	Signal Ground
C	RS422/RS485 Data In-
D	RS422/RS485 Data Out+, RS232 Data Out
B	RS422/RS485 Data In+, RS232 Data In

## **2.7 Installation/Operation**

### **Installing and Operating the 4116-T300 Multi-Band, Block Translator**

1. Connect a -40 dBm to -15 dBm signal to L-BAND INPUT, (Figure 2.5).
2. Connect the RF OUTPUT, to the external equipment.
3. Connect 100-240  $\pm$ 10% VAC, 47 - 63 Hz to AC In Connector on the front panel.
4. Be sure DS1 (green, DC Power) is on and DS2 (red, Alarm) is off (Figure 2.5).
5. Set the gain so that the output level is always within the range of -15 to 0 dB.  
(See Table 2.0 and 2.6.1).
6. Select either INT (for internal 10 MHz ref), AUTO (for internal 10 MHz ref UNLESS an external 10 MHz, +2 to +8 dBm signal is connected to J2), or EXT (for external 10 MHz, +2 to +8 dBm reference that is inserted at J2) via Ethernet or serial command. (see Section 2.0 and Table 2.6.1).
7. Check that a 10 MHz, signal is present at the 10 MHz REF OUTPUT at the same level as the input,  $\pm$ 0.5 dB (J4 - Figure 2.5).
8. AC Fuse - The fuse is a 1A/250V 1.25" x .25" (slow blow) and is inserted in the fuse F1 position.

**NOTE:** If a fuse continues to open, the power supply is most likely defective.

#### **NOTE: Planning Ethernet Access**

It is recommended that IP knowledgeable customer personnel be consulted as a resource in the installation and use of the Ethernet access features of the Cross Technologies product.



6170 Shiloh Road  
Alpharetta, Georgia 30005

(770) 886-8005  
FAX (770) 886-7964  
Toll Free 888-900-5588

WEB [www.crosstechnologies.com](http://www.crosstechnologies.com)  
E-MAIL [info@crosstechnologies.com](mailto:info@crosstechnologies.com)

Printed in USA